





CONTROL BD 1/7

2/15 - '85 Kaje

File 44-37-75

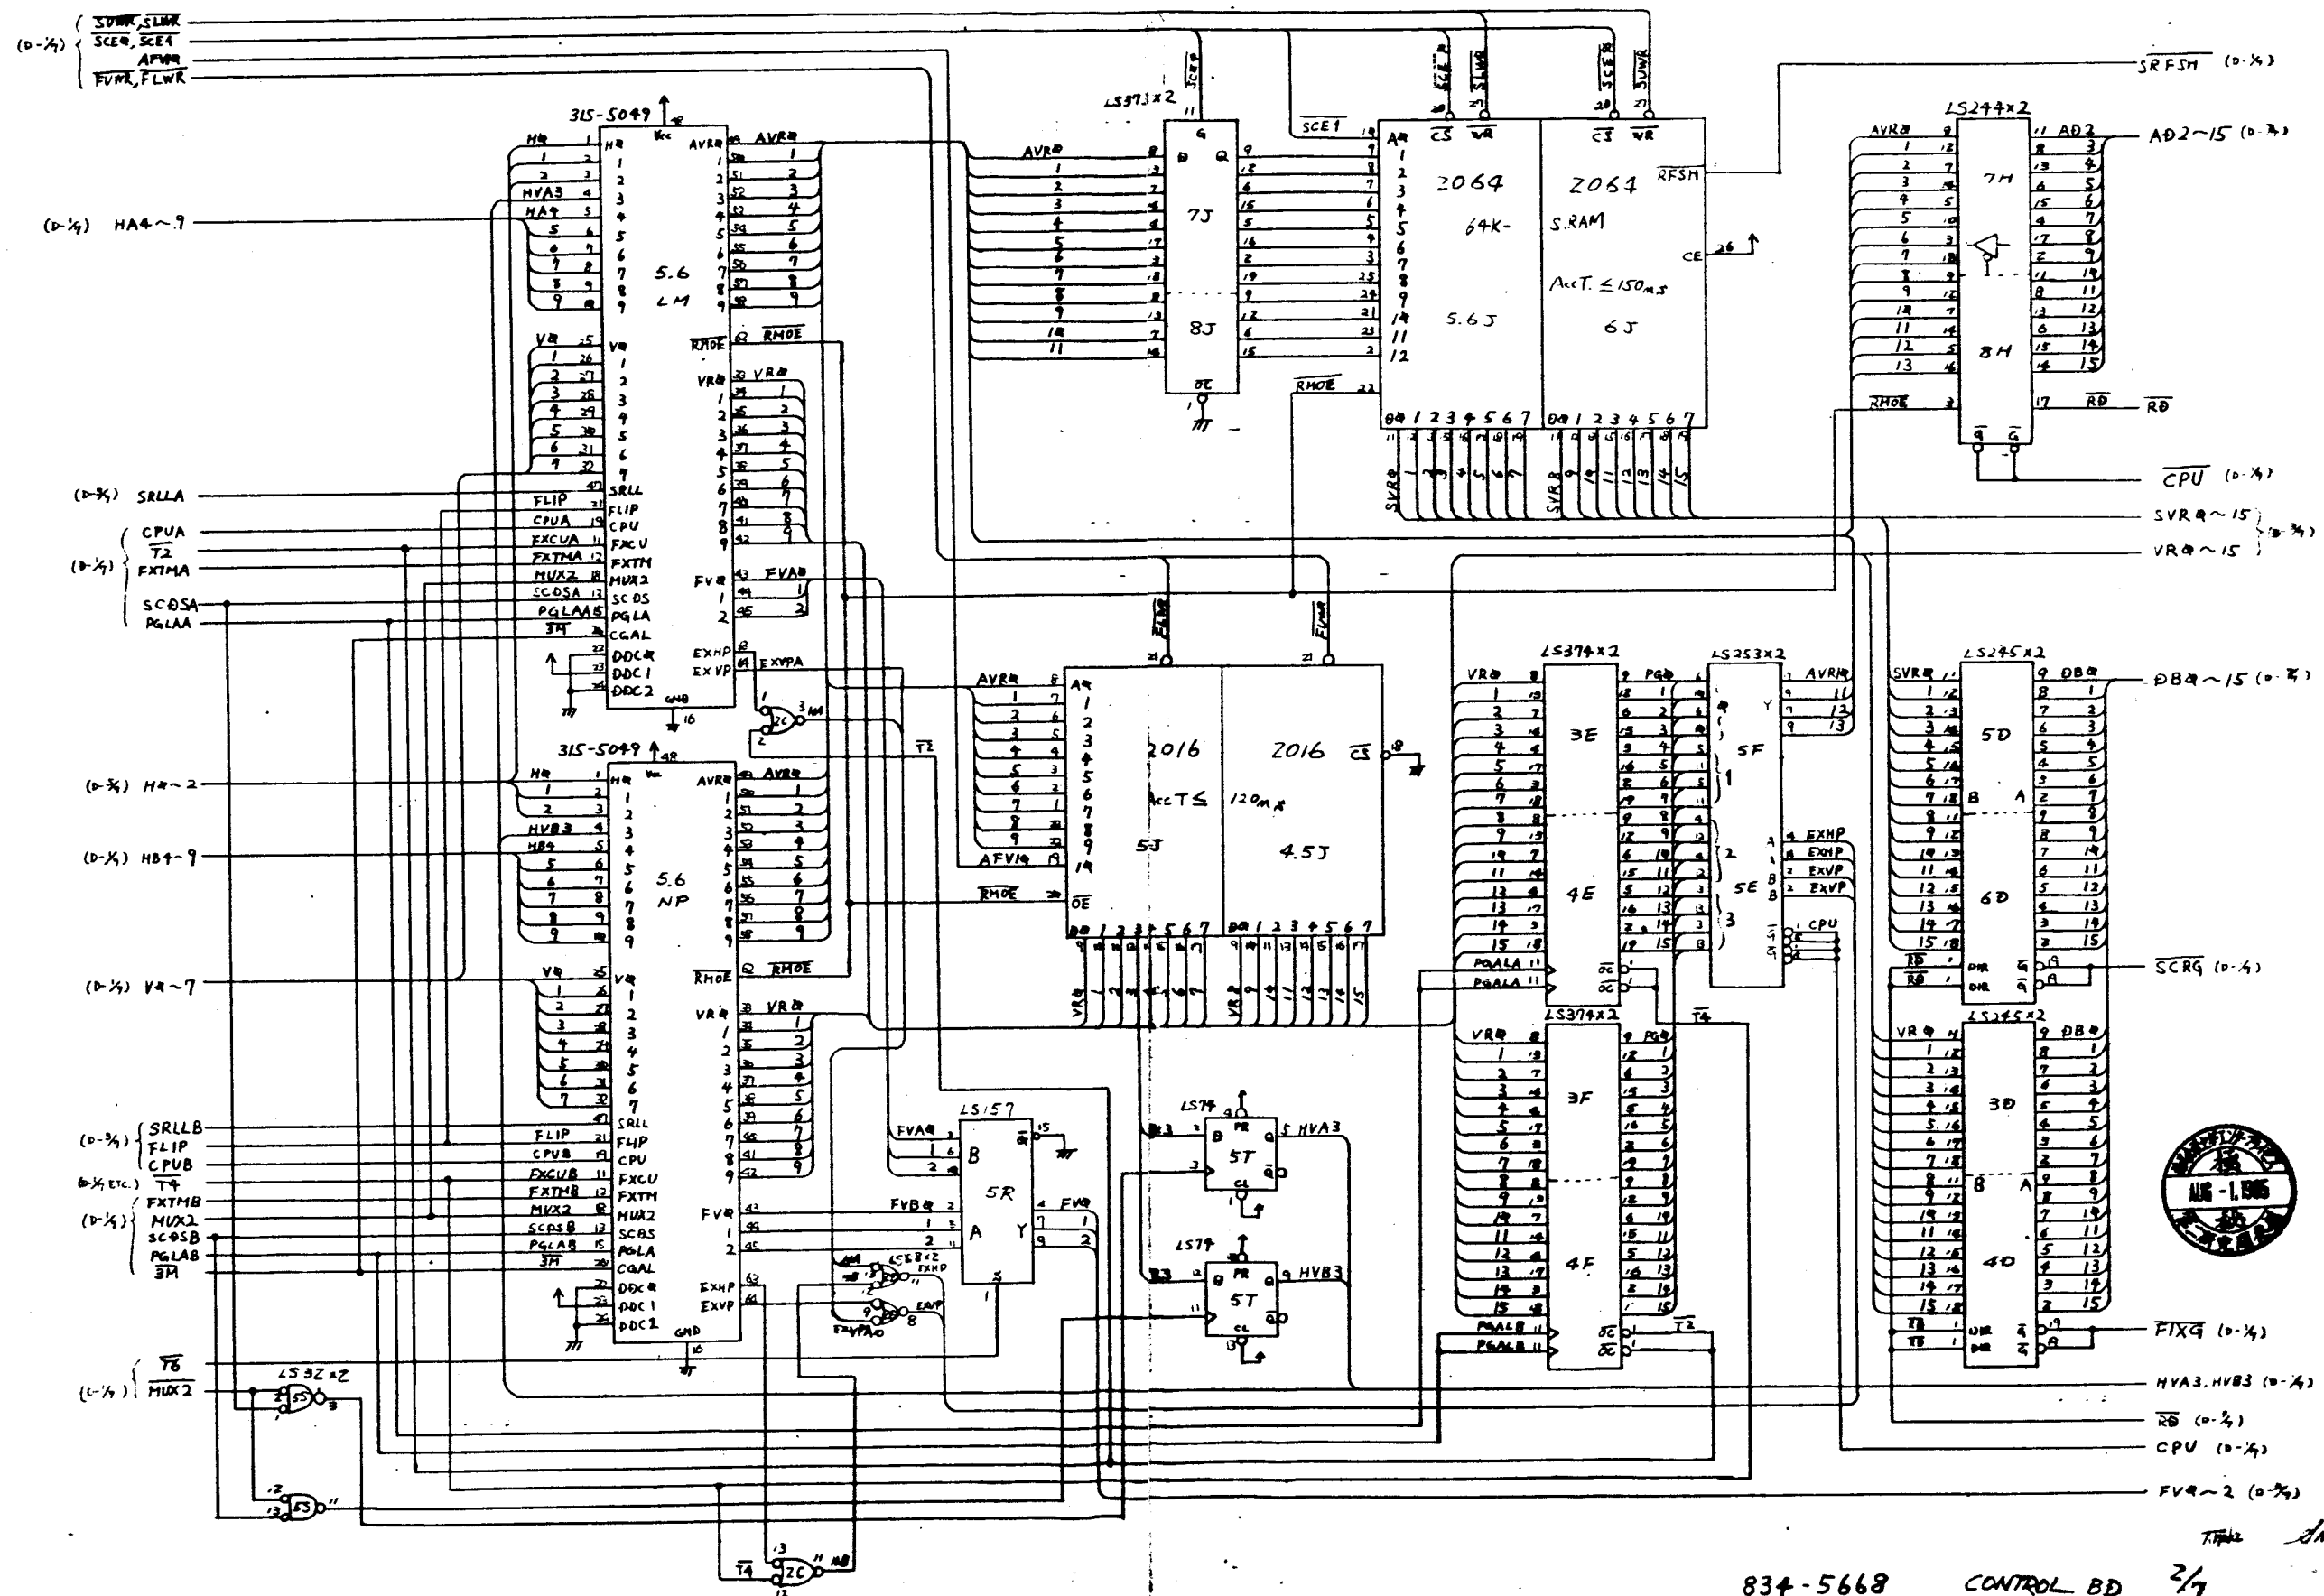

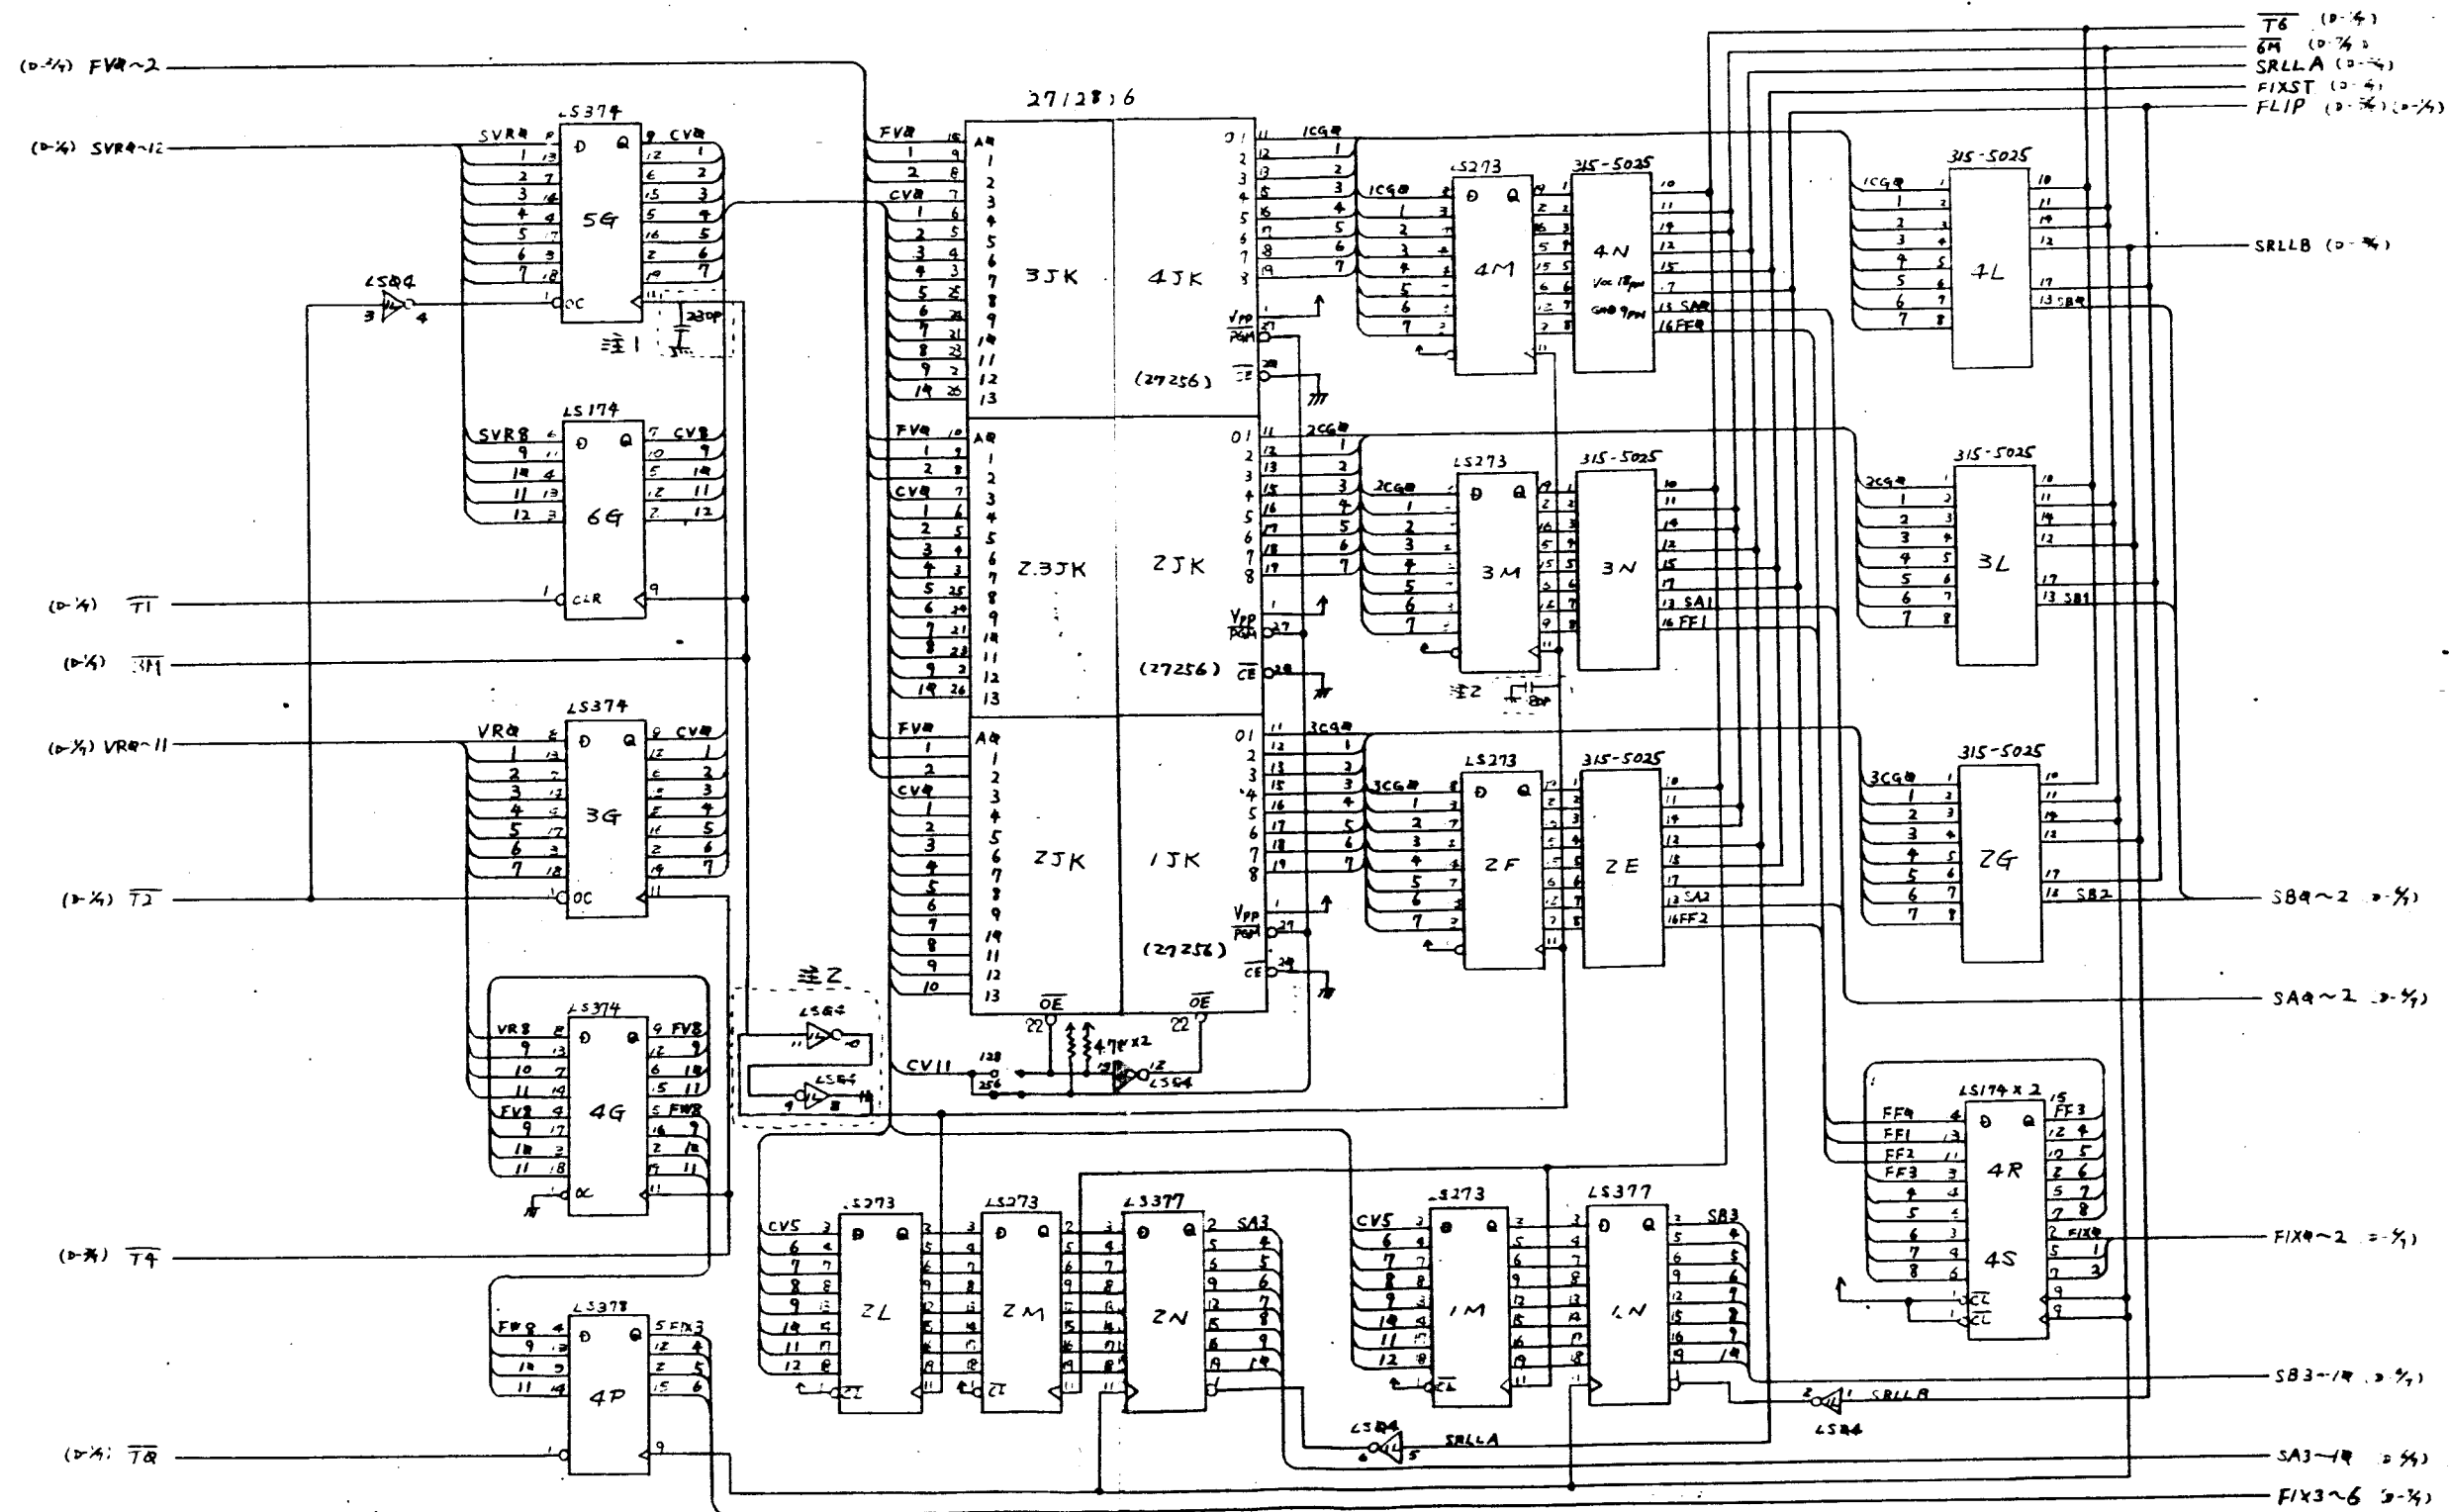

※ 林の色抜け (スクロヒラ) が出た場合

- 注1 (25) LS374の⑪ピンと⑫の間に230PFを付ける。
- 注2 (25) ①の230PFを付けた取り外しの場合LS273⑪のLS274の⑧番に入っているパターンのカッパ LS273⑪のLS274⑪番ピンにエハンパー (7 LS273の⑩と⑪の間に180PFの電容を付ける (25M))




834-5668

CONTROL BD 3/7

11/15-84


Kaji




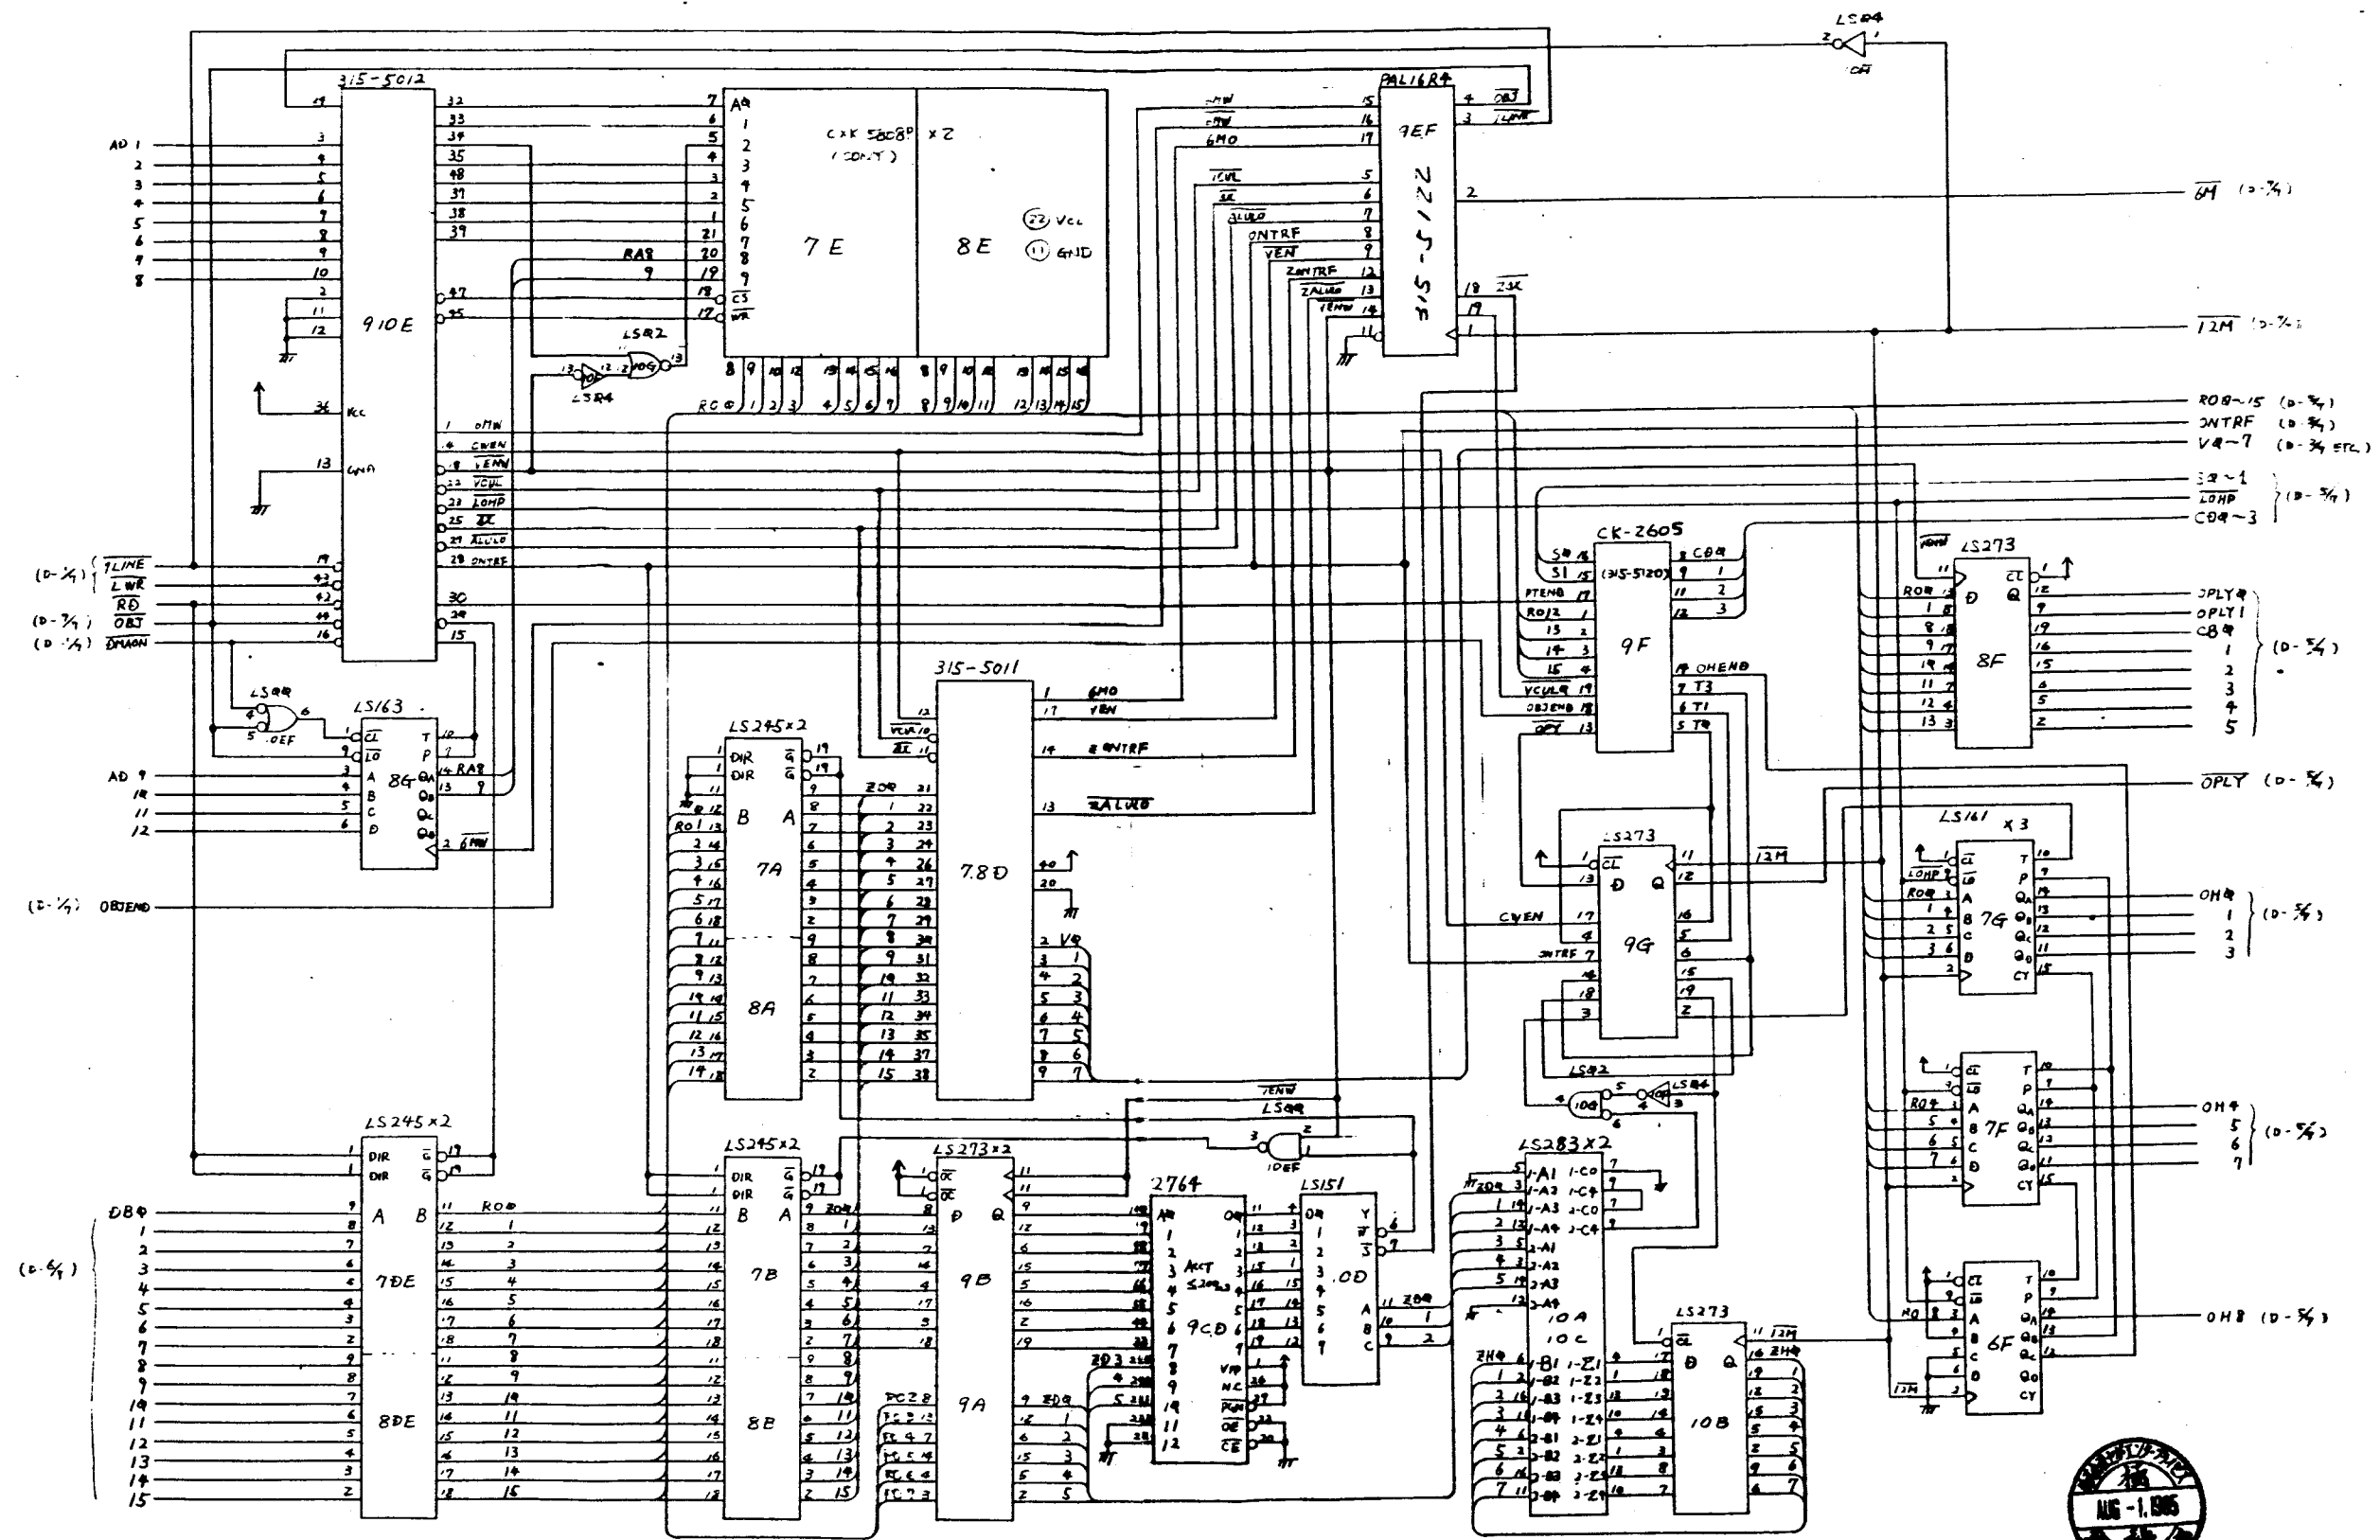


#1122, #1129

OB3 (200M)

834-5668 CONTROL BD 4/7 2/6-85 Haje

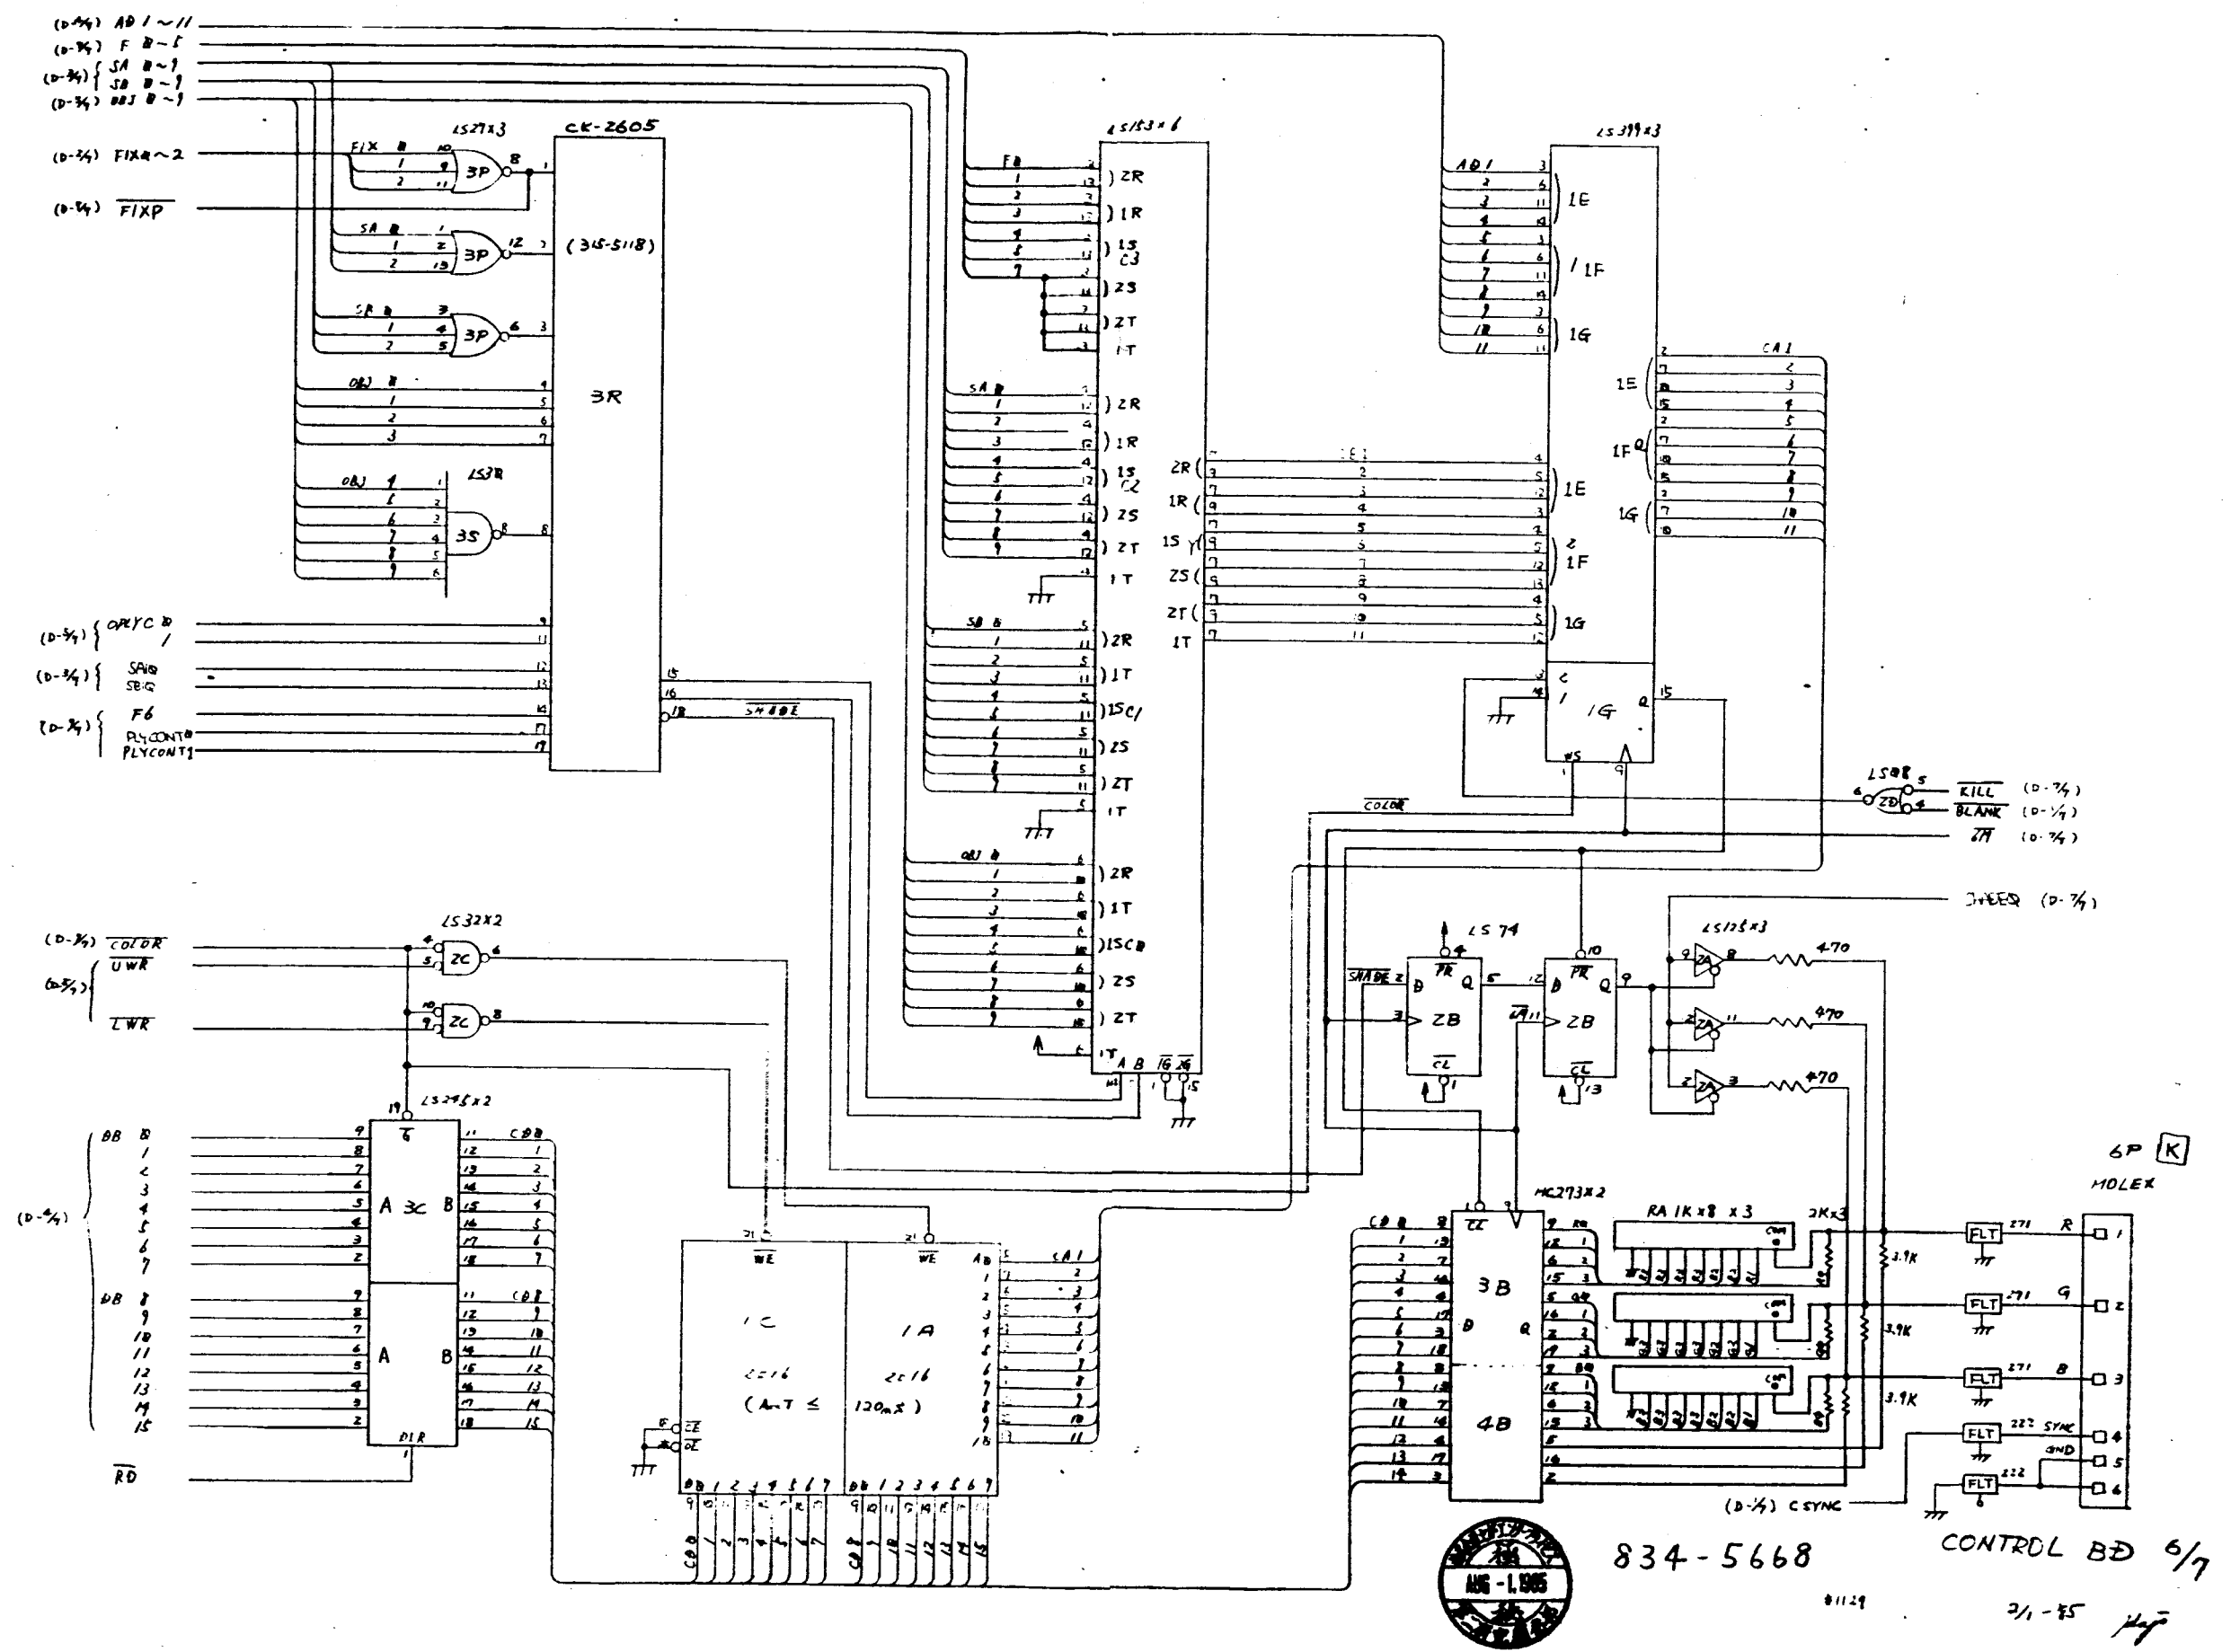

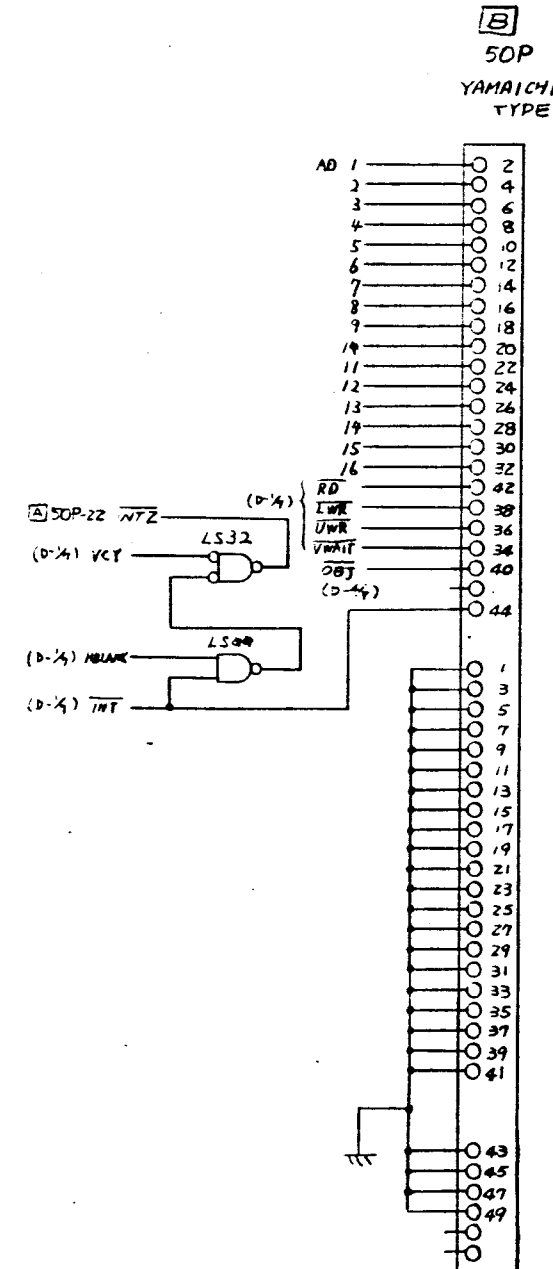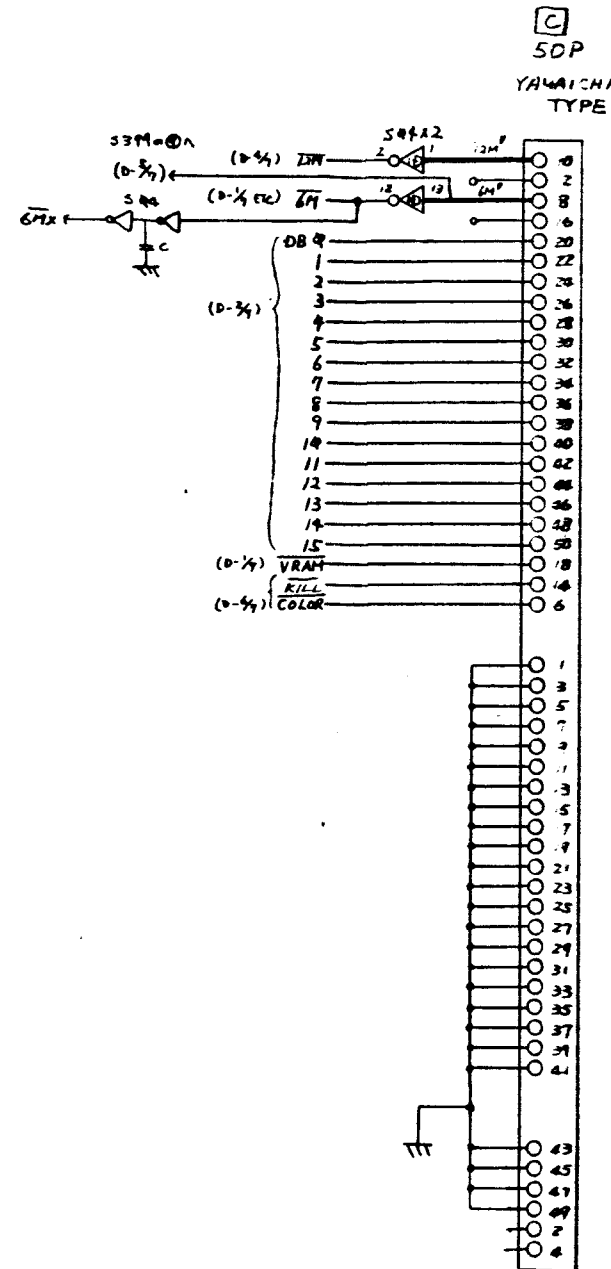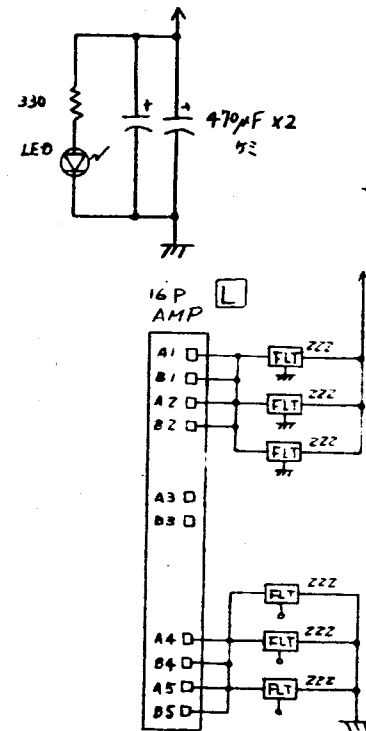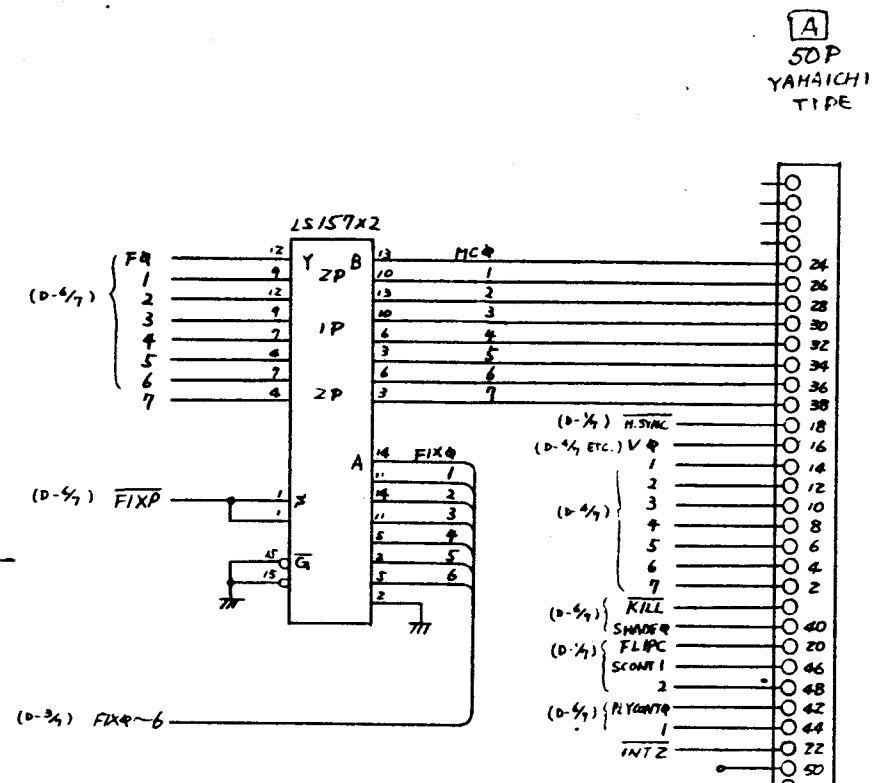

834-5668

CONTROL B 7/4




CPU BD 3/5

11/27-184

1/24 - 25

3/21 - '85

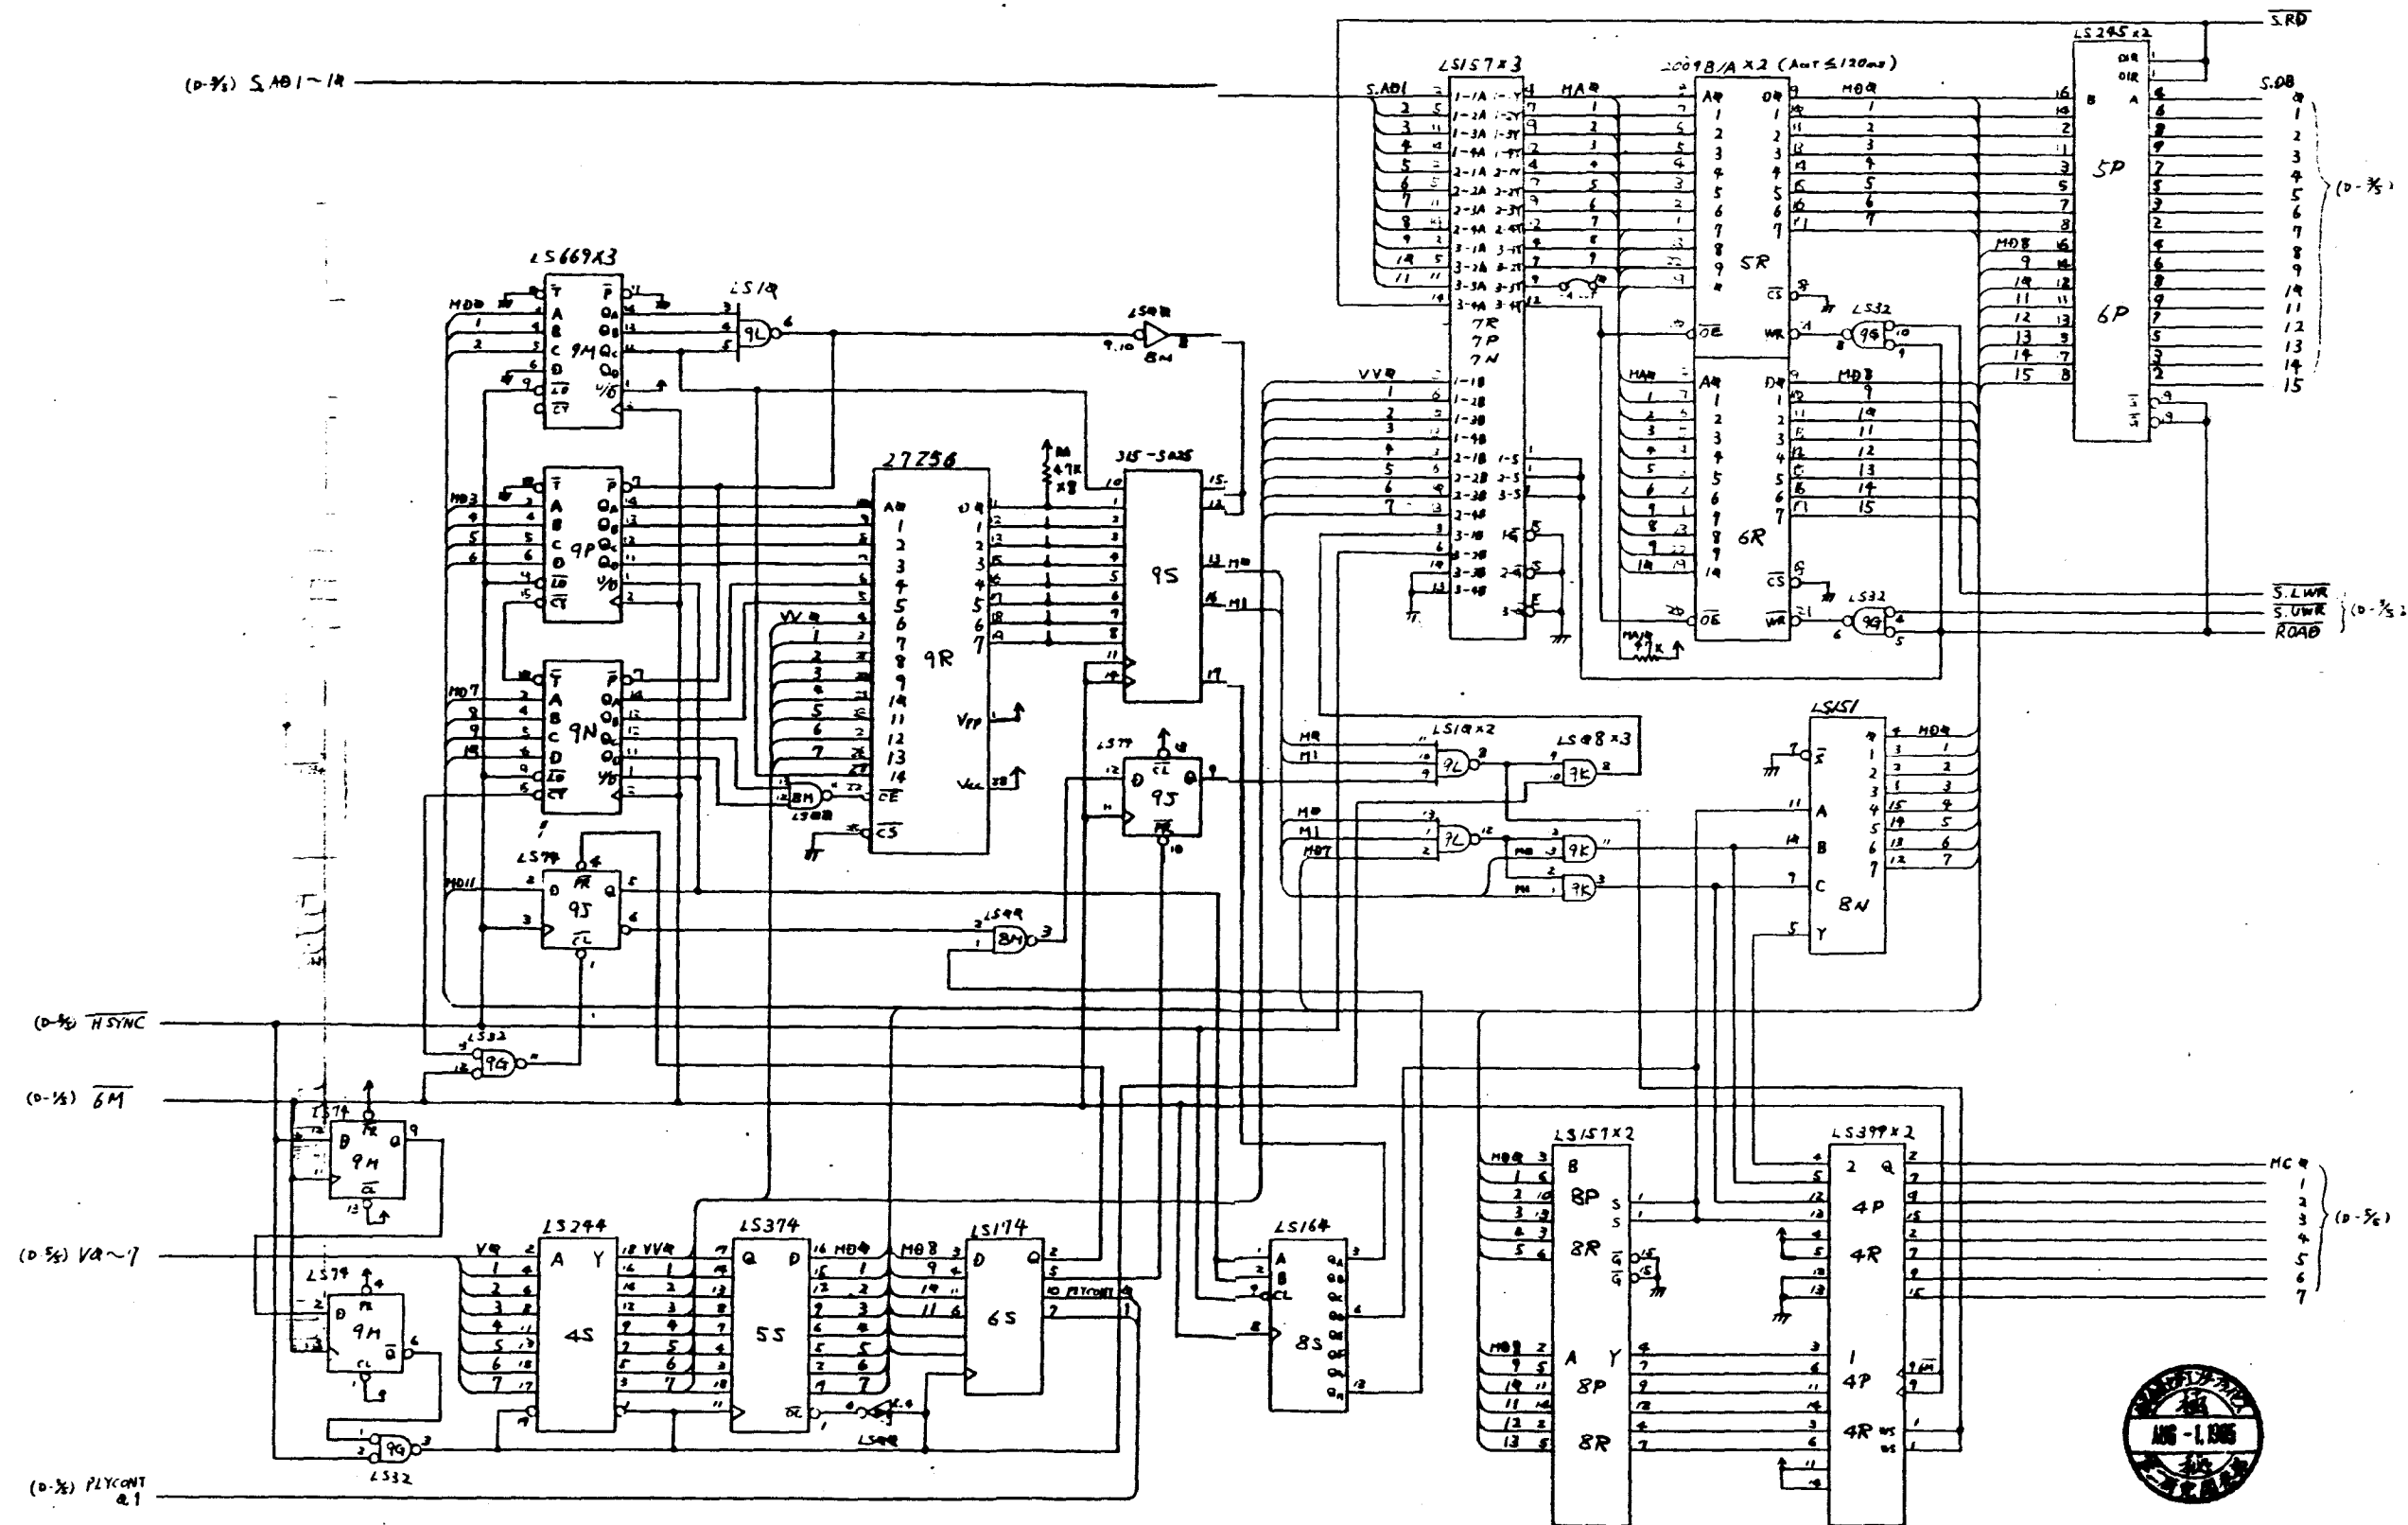


834-5704 CPU BD 4/5


#1129

31-25


L
IOP
AMP TYPE

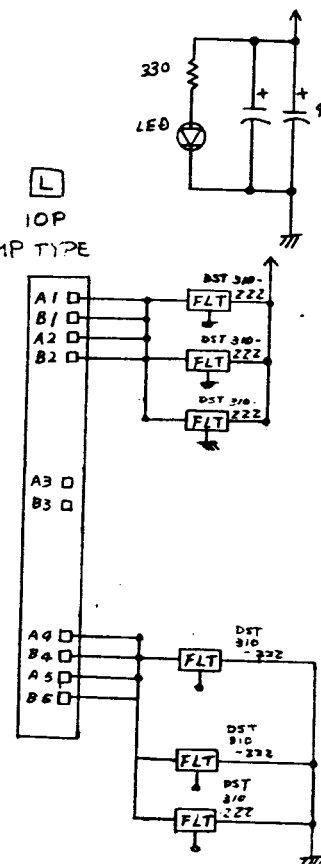


A
50P
YAMAICHI
TYPE

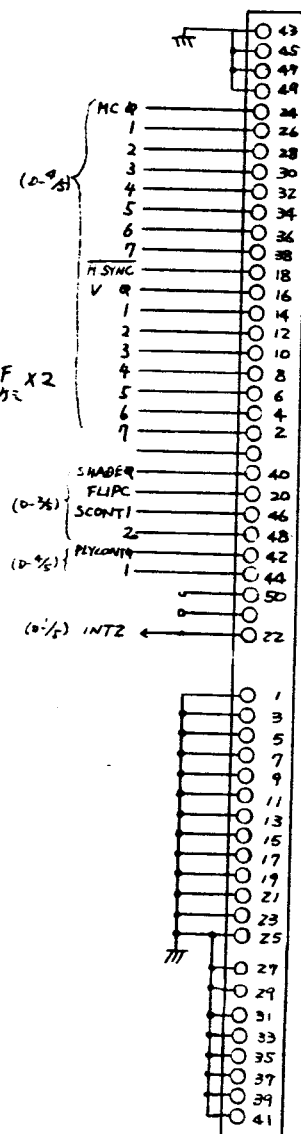

C
50P
YAMAICHI
TYPE

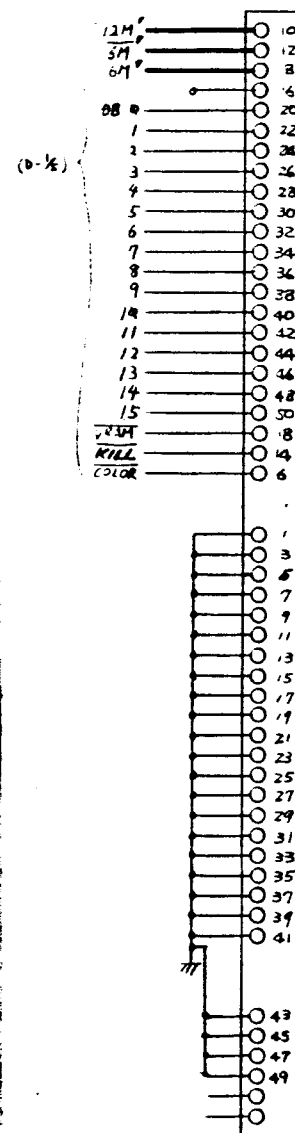



B
50P
YAMAICHI
TYPE

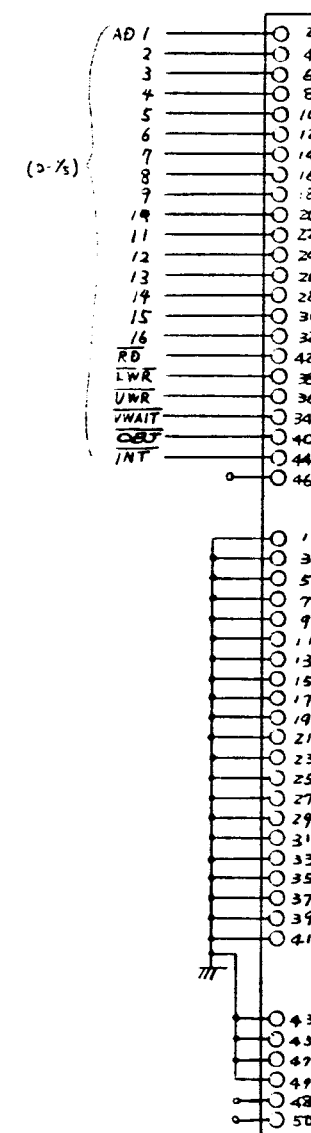

834-5704 CPU BD


5/5


note

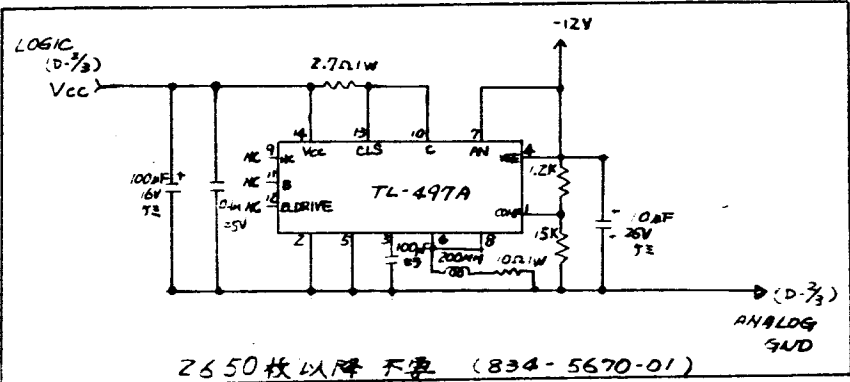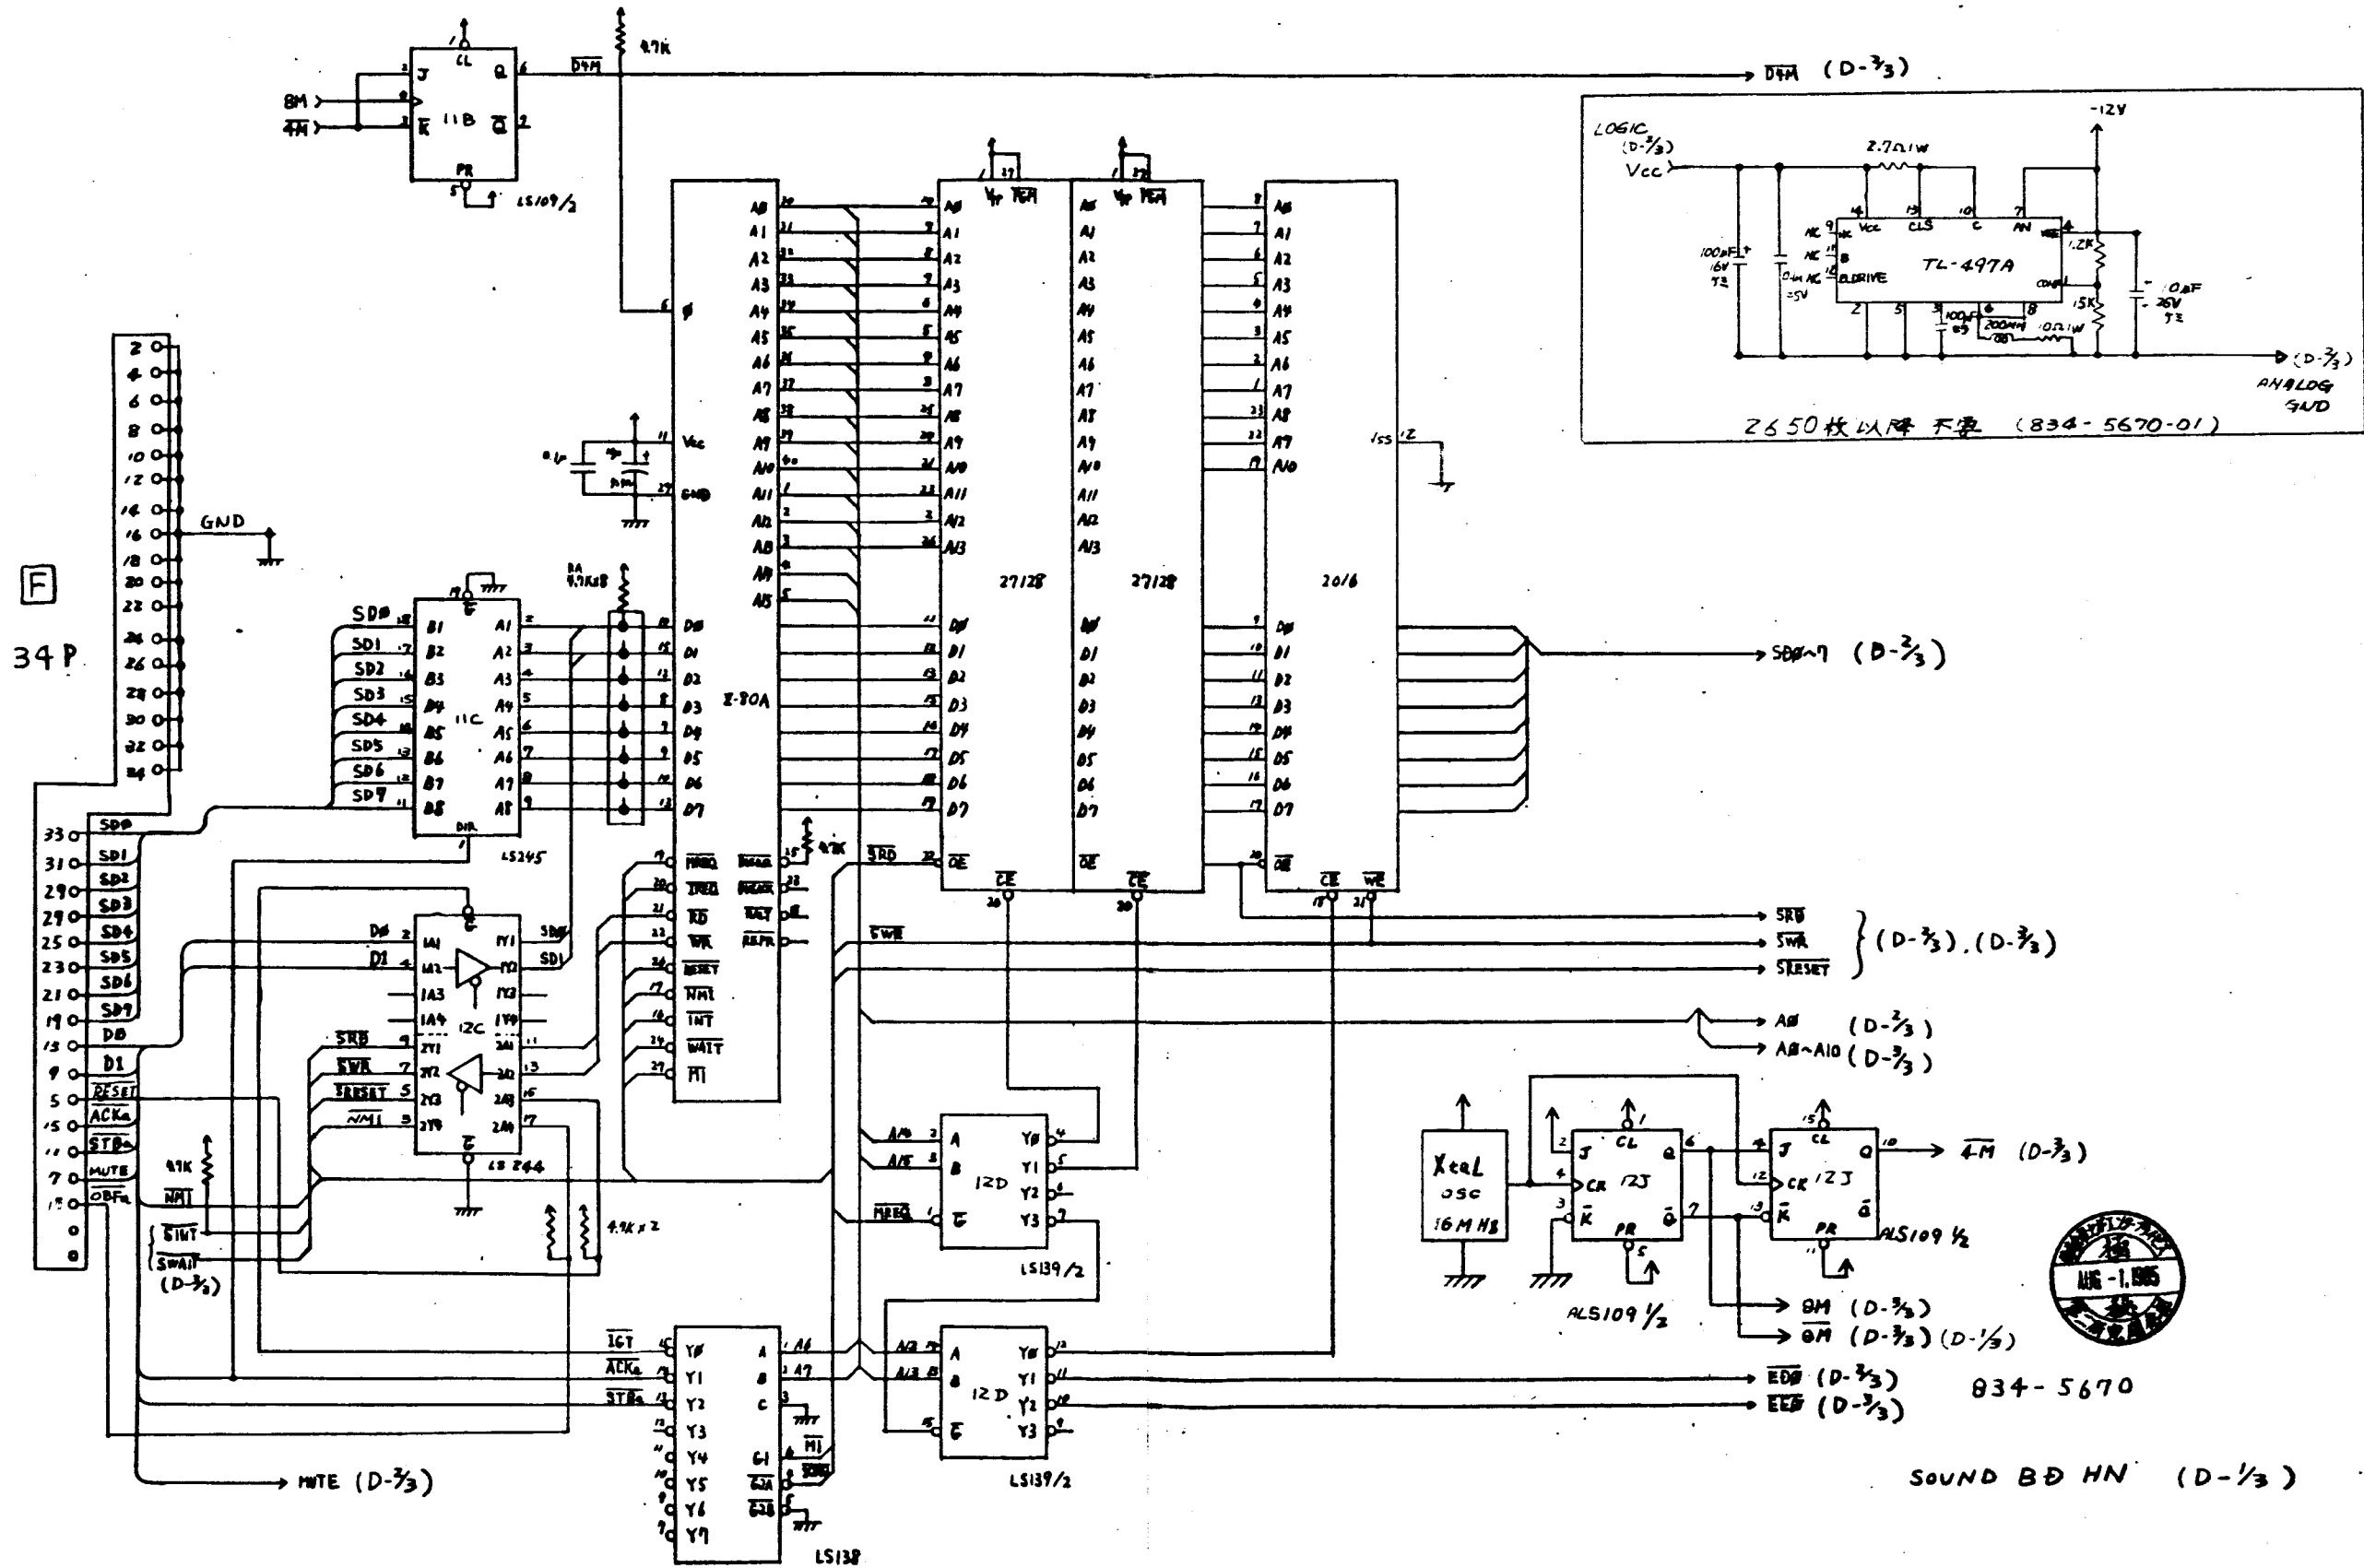

834-5670

SOUND BD HN (D-1/3)

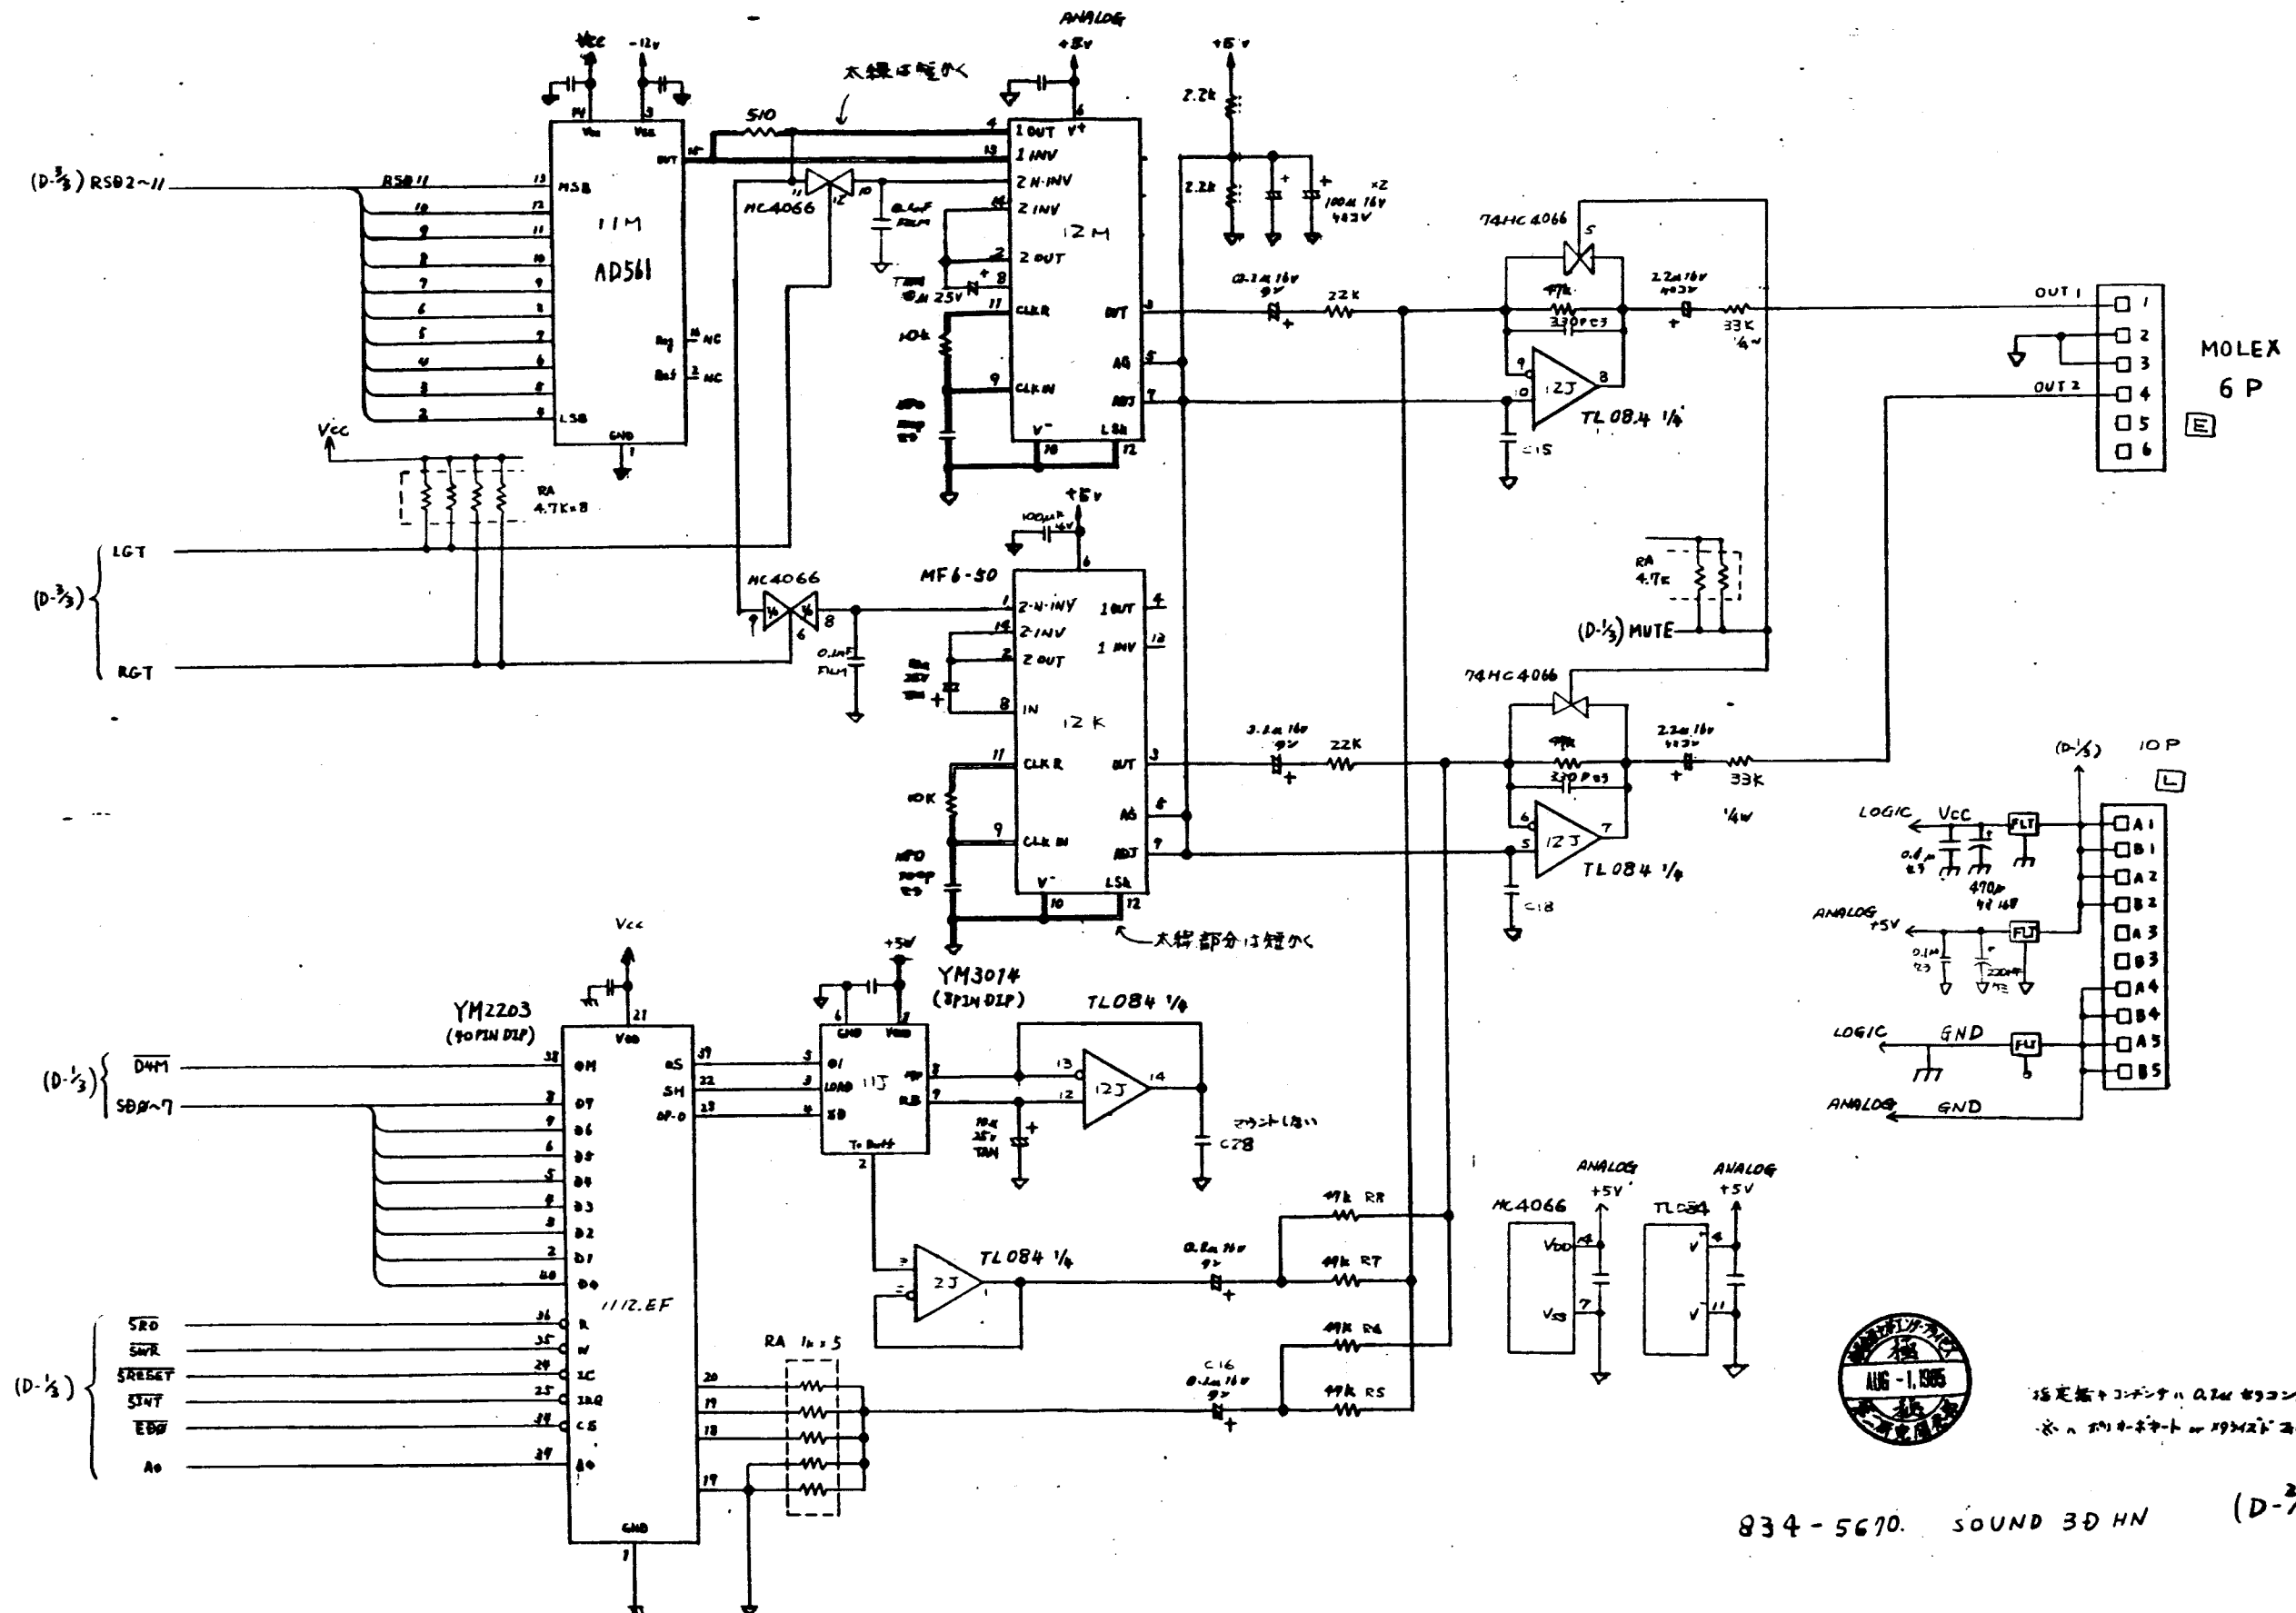

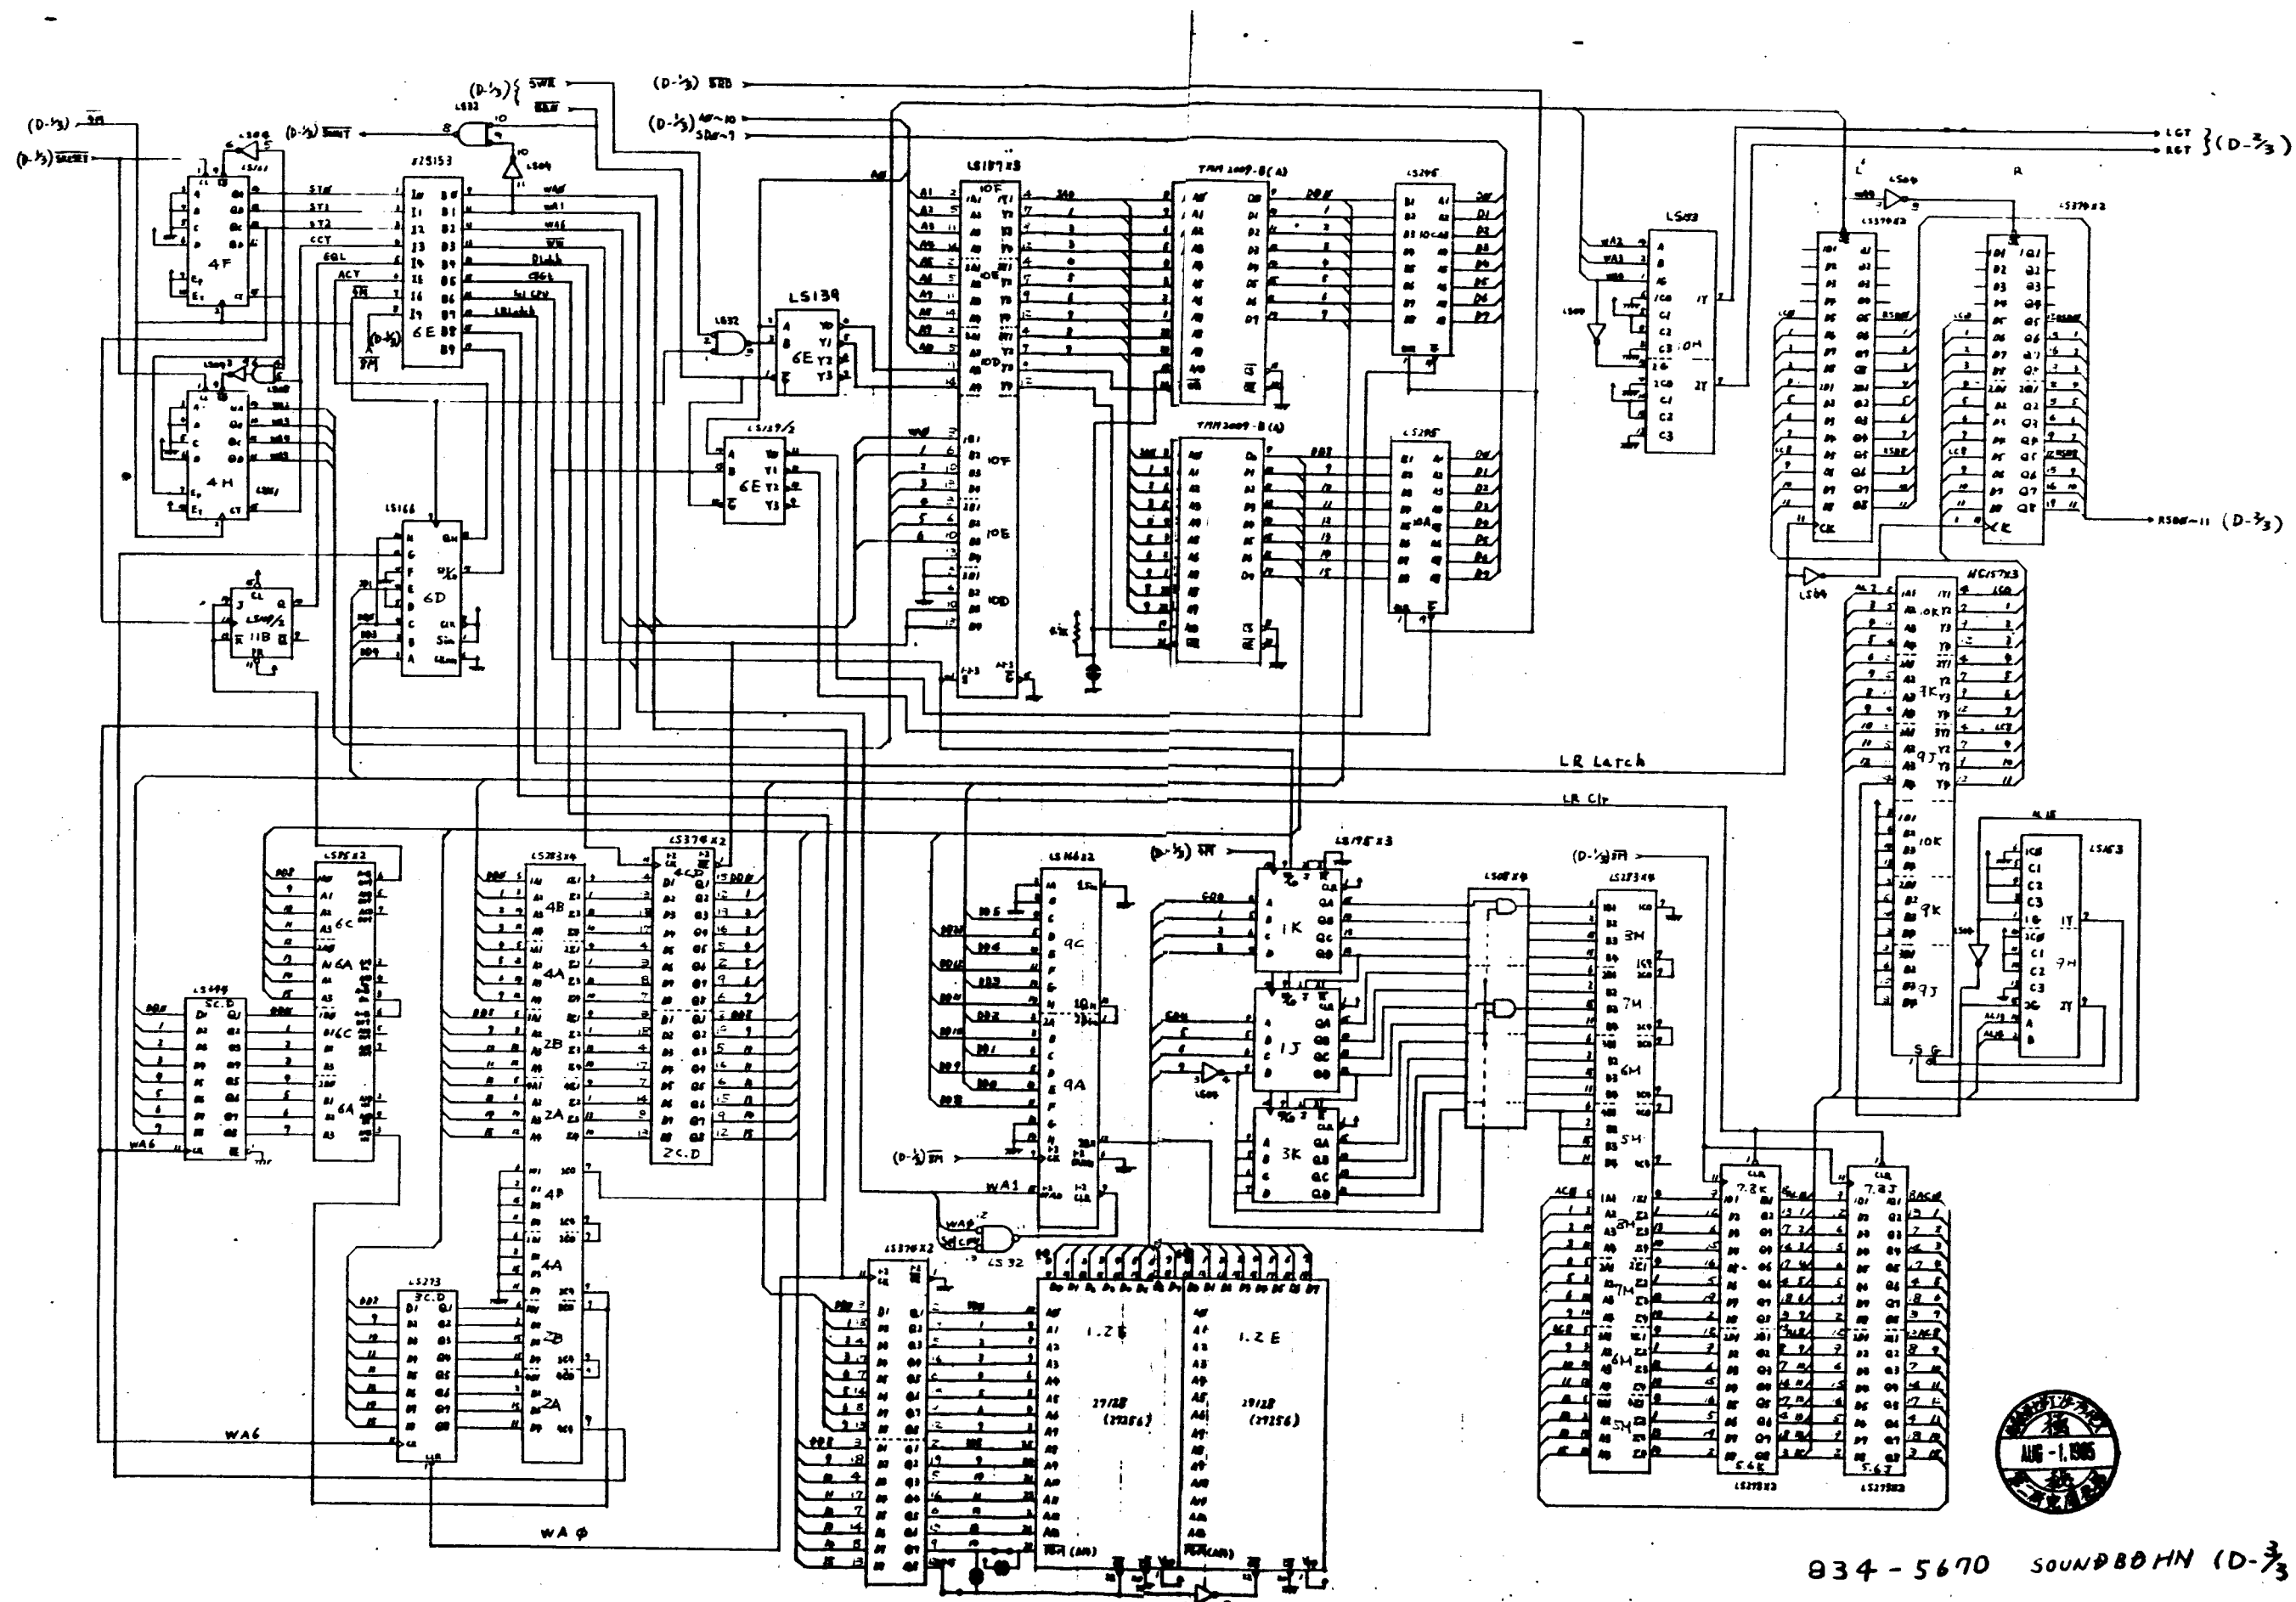


834-5670 SOUND BOHN (D-3)

CN 40P YAMAICHI
TYPE

CN 40P YAMAICHI
TYPE

27256 / 27128 / 2764 / 64K-SRAM

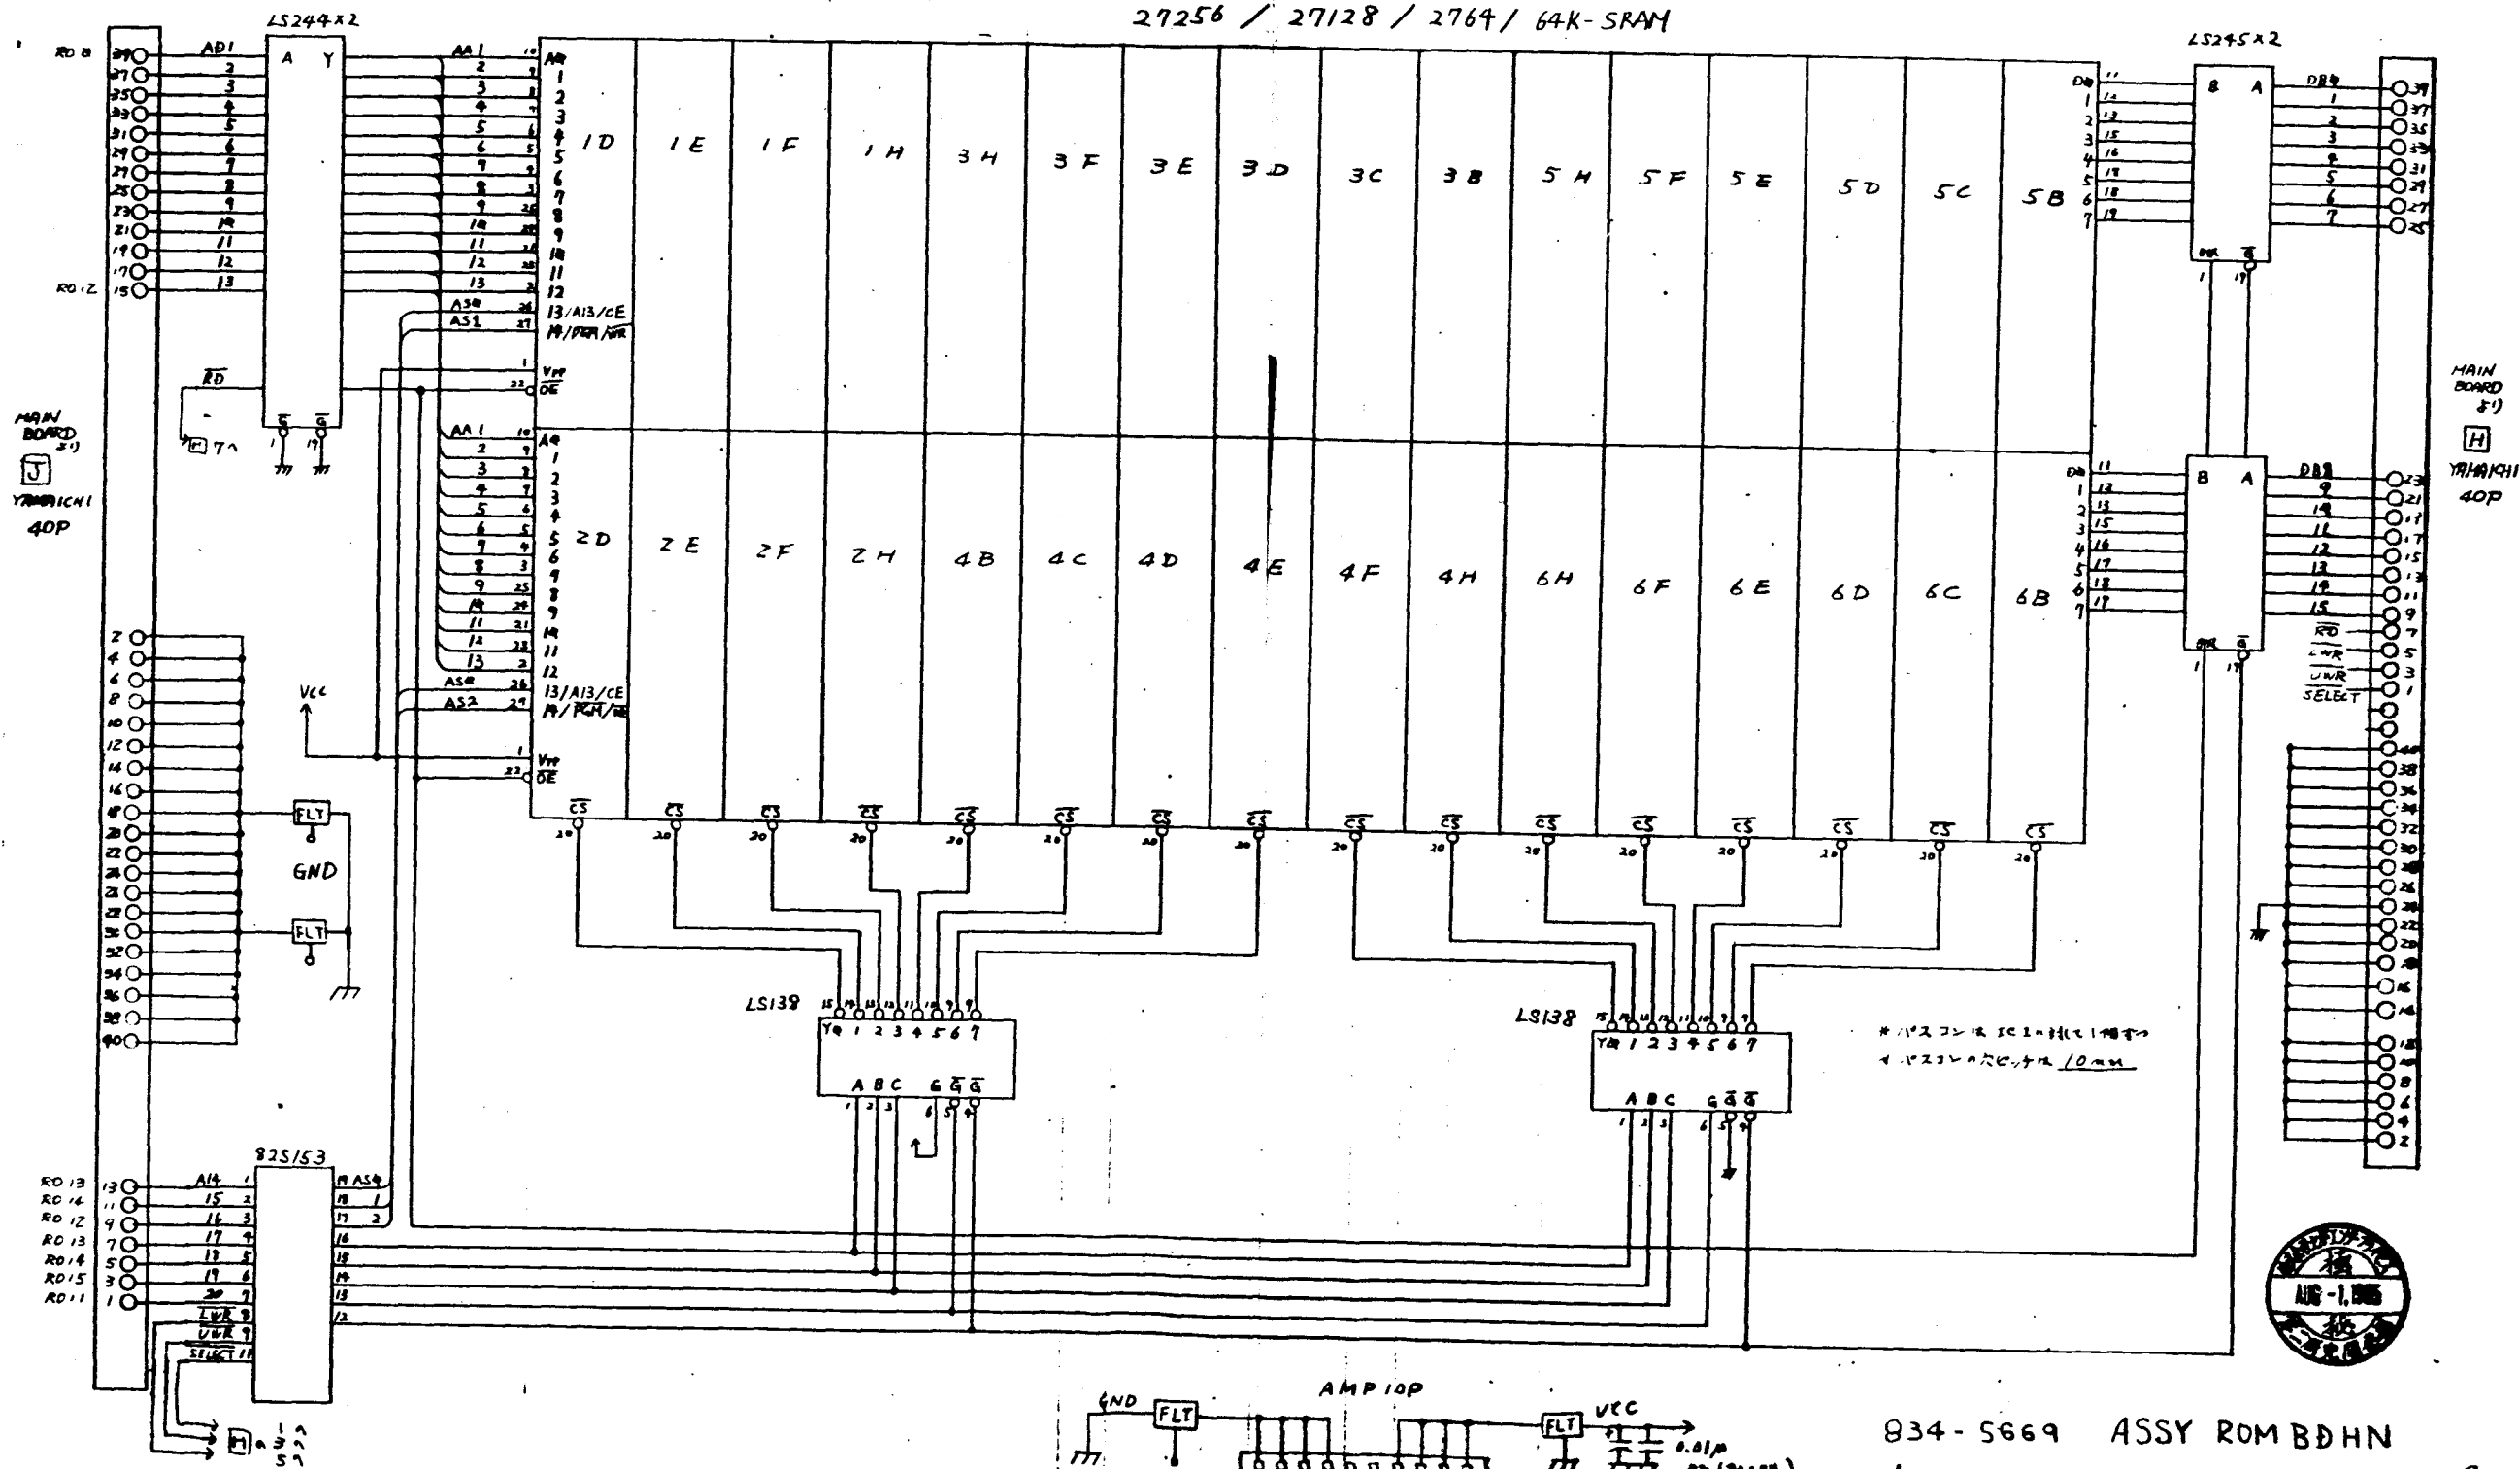

MAIN
BOARD
5V
H
YAMAICHI
40P



834-5669 ASSY ROM BDHN
(101-5267)

85 Fuji 2/1/85