

Edge Connector

SOLDER SIZE	NO.	NO.	PARTS SIDE
GND	A	1	GND
GND	B	2	GND
+5V	C	3	+5V
+5V	D	4	+5V
	E	5	
+12V	F	6	+12V
KEY	H	7	KEY
COIN COUNTER 2	J	8	COIN COUNTER 1
COIN OUT 2	K	9	COIN OUT 1
SPEAKER (-)	L	10	SPEAKER (+)
	M	11	
VIDEO GREEN	N	12	VIDEO RED
VIDEO SYNC	P	13	VIDEO BLUE
SERVICE SW	R	14	VIDEO GND
RESET SW	S	15	
COIN 2	T	16	COIN SW1
P2	U	17	P1
UP	V	18	UP
DOWN	W	19	DOWN
LEFT	X	20	LEFT
RIGHT	Y	21	RIGHT
GRAB	Z	22	GRAB
ATTACK	a	23	ATTACK
JUMP	b	24	JUMP
	c	25	
	d	26	
GND	e	27	GND
GND	f	28	GND

JOYSTICK LEVER — 8 directions

