


a. Tag Team Wrestling

SOLDER SIDE	PIN NUMBERS		COMPONENT SIDE
- 5 VOLTS	A	1	+ 12 VOLTS
SPEAKER +	B	2	SPEAKER -
1P CONTROL EXECUTE SW.	C	3	1P CONTROL UP SW.
1P CONTROL RIGHT SW.	D	4	1P CONTROL LEFT SW.
1P CONTROL START SW.	E	5	
	F	6	
	H	7	
	J	8	
COIN COUNTER 1	K	9	1P CONTROL DOWN SW.
COIN SWITCH 1	L	10	COIN SWITCH 2
	M	11	COIN COUNTER 2
1P CONTROL MOVE SEL SW.	N	12	
CRT GREEN	P	13	CRT BLUE
CRT RED	R	14	CRT CSYNC
	S	15	
GROUND	T	16	GROUND
CRT GROUND	U	17	GROUND
+ 5 VOLTS	V	18	+ 5 VOLTS

HARNES CONNECTOR PIN-OUT

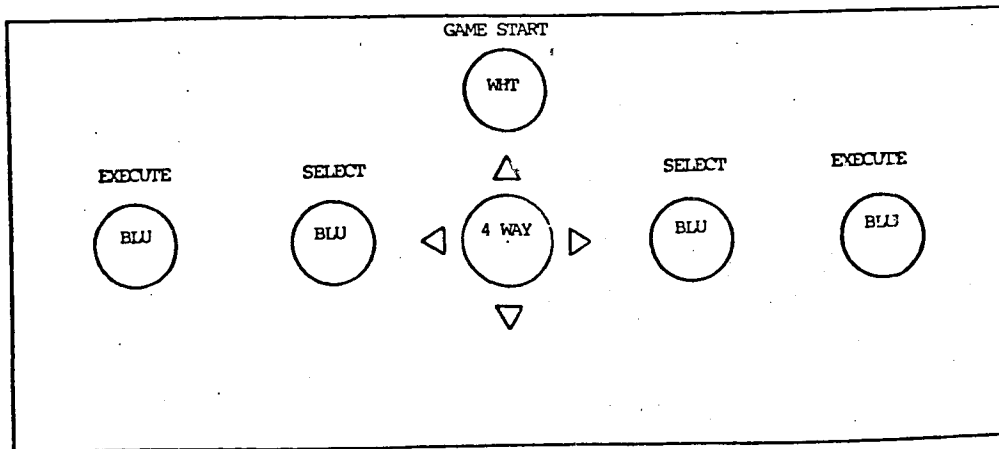

CONTROL PANEL LAYOUT

a. Tag Team Wrestling (continued)

OPTION TABLES

DIPSWITCH 1		1	2	3	4	5	6	7	8	
COIN 1	1 COIN = 1 CREDIT:	OFF	OFF							
	1 COIN = 2 CREDIT:	ON	OFF							
	1 COIN = 3 CREDIT:	OFF	ON							
	2 COIN = 1 CREDIT:	ON	ON							
COIN 2	1 COIN = 1 CREDIT:			OFF	OFF					
	1 COIN = 2 CREDIT:			ON	OFF					
	1 COIN = 3 CREDIT:			OFF	ON					
	2 COIN = 1 CREDIT:			ON	ON					
NOT USED							OFF			
CABINET TYPE		TABLE:					OFF	OFF		
		UPRIGHT:					ON	ON		
NOT USED									OFF	
DIPSWITCH 2		1	2	3	4	5	6	7	8	
DIFFICULTY LEVEL	NORMAL:	OFF								
	DIFFICULT:	ON								
ATTRACT MODE	NO:		OFF							
SOUND	YES:		ON							
NOT USED					OFF	OFF	OFF	OFF	OFF	